

Ford

THE UNIVERSAL CAR

WHOLESALE PRICE LIST OF PARTS

MODEL T

Effective December 20, 1922

13 4-1
- 2 5-1
16 1 0
0 0

Ford Motor Company
DETROIT, MICHIGAN

Hopewell Junction, N.Y. Charles

Ford Motor Company

FORD FACTORIES AND BRANCHES

Ford Factory, Detroit—*Parent Plant*

Ford Factory, Ford, Ontario, Canada

Ford Factory, Manchester, England

AMERICAN WHOLESALE BRANCHES

Atlanta	Cleveland	Fargo	Los Angeles	Oklahoma City	Salt Lake City
Buffalo	Columbus	Houston	Louisville	Omaha	San Francisco
Cambridge	Dallas	Indianapolis	Memphis	Philadelphia	Seattle
Charlotte	Denver	Jacksonville	Milwaukee	Pittsburgh	Washington
Chicago	Des Moines	Kansas City, Mo.	Minneapolis	Portland	
Cincinnati	Detroit	Kearny, N. J.	New Orleans	St. Louis	

Instructions for Ordering Parts

- 1—Order all parts through the Authorized Ford Dealer.
- 2—Parts may be ordered in wholesale quantities at a discount of $33\frac{1}{3}\%$ f. o. b. the nearest Ford Branch providing the net amount of the order exceeds \$50.00. When delivery is taken from Dealer's Stock a discount of 25% will apply regardless of quantity ordered.
- 3—Always give Catalog Number and Name of each part ordered.
- 4—Specify whether shipments are to be made by freight or express.
- 5—Remittance by Draft or Money Order must accompany all parts orders placed for shipment from the Ford Branch.

Telegraph Code

We list below a brief General Code covering miscellaneous instructions relative to the shipment of parts.

Toperig—Ship to me (us) by express.

Toperkleur—Ship by express to —

Topersteen—Ship to me (us) by freight.

Toper—Ship to me (us) by parcel post.

Topfton—When and how did you ship part called for in my (our) telegram of —

Topflutch—When and how will you ship parts called for in my (our) telegram of —

Topfwasser—When and how will you ship parts called for in my (our) letter of —

WHOLESALE PRICE LIST OF PARTS

FORD MODEL T 1909-1922

EFFECTIVE DECEMBER 20, 1922

Part No.	Name of Part	Year	LIST PRICE				Each	Tax Status	Fac. No.	No. Req. Per Car
			Minimum Whole- sale Quan.	Lots of 20 per lot	Lots of 100 per lot	Lots of 1000 per lot				
REAR AXLE										
2500...	Rear axle assembly	1909-22	2				\$60 00.	MH.	95E.	1
2501...	Axle housing—right	1915-22	2				8 00.	MH.	7635C.	1
2502...	Axle housing—left	1915-22	2				8 00.	MH.	7636C.	1
2503E...	Axle housing bolt	1913-22	100		\$1 00	\$6 00	03.		2854.	7
2503F...	Axle housing bolt nut	1909-22	100		1 00	6 00	02.		44.	7
2504...	Rear axle case gasket	1919-22	20	\$0 30	1 25		03.		139.	1
2505...	Axle shaft	1912-22	6				1 50.	MH.	2818.	2
2506...	Axle shaft washer	1909-22	20	25	1 00		03.		39.	1
2508...	Axle shaft R. B.	1909-22	6				1 00.		253.	4
2509...	Axle shaft R. B. sleeve—R	1909-22	6				20		170.	2
2509B...	Axle shaft R. B. sleeve—L	1909-22	6				20		161.	2
2510...	Axle housing cap	1909-19	20	50	2 00		05.		56.	2
2510½...	Axle housing cap	1919-22	20	50	2 00		05.		56B.	2
2510A...	Axle outer roller bearing steel washer	1909-22	20	25	1 00		02.		199B.	2
2510B...	Axle outer roller bearing felt washer	1909-22	20	80	3 50	27 50	05.		54.	2
2512C...	Diff. case—left	1914-22	5				1 40.	MH.	84.	1
2513C...	Diff. case—right	1914-22	4				90.	MH.	81.	1
2514B...	Diff. case stud	1915-22	20	70	3 00		05.		2865.	3
2514C...	Diff. case bolt	1922	20	70	3 00		05.		52C.	3
2515...	Diff. case stud nut	1909-22	100		1 50	10 00	03.		8.	3
2518...	Diff. drive gear	1909-22	6				3 00.	MH.	12B.	1
2519...	Diff. drive gear screw	1909-22	100		2 00	12 00	03.		103.	10
2519A...	Diff. gear lock ring	1909-22	20	30	1 00		02.		118.	2
2520B...	Diff. gear	1909-22	6				1 00.	MH.	13B.	2
2521B...	Diff. gear key	1911-22	10		4 00		05.		137.	2
2524C...	Diff. pinion	1915-22	6				35.	MH.	14D.	3
2526B...	Diff. spider	1909-22	6				80.	MH.	15D.	1
2528...	Diff. thrust washer	1909-22	10				15.		30.	2
2529...	Diff. thrust plate	1909-22	10		12 00		15.	MH.	31.	4
2530...	Diff. thrust plate pin	1909-16	20		1 50		03.		17.	4
2531...	Diff. thrust plate pin	1909-16	20		1 00		03.		37.	2
2531B...	Diff. thrust plate pin	1917-22	29	20	75		02.		7640.	6
2532...	Diff. housing oil plug	1909-22	6				05.		817.	1
2545...	Rear axle grease cup	1909-22	20	1 60	7 00		10.		76.	1
2547...	Rear radius rod—right	1909-22	2				1 60.	MH.	152.	1
2547B...	Rear radius rod—left	1909-22	2				1 60.	MH.	158.	1
2548...	Radius rod nut	1909-22	100		3 50	25 00	05.		77.	2
2549...	Radius rod lock nut	1909-22	10		3 00		05.		78.	2
2550...	Radius rod lock washer	1909-22	100		1 00		02.		2823.	2
2551...	Radius rod bolt	1909-22	20	70	3 00		05.		83.	4
2551B...	Radius rod bolt nut	1909-22	100		2 50	18 00	03.		60.	4
2557...	Hub cam shaft—right	1909-22	6				15.		92B.	1
2558...	Hub cam shaft—left	1909-22	6				15.		61B.	1
2559...	Hub cam shaft bushing	1909-22	10				05.		173.	2
2562...	Cam shaft lever	1909-22	6				10.		62.	2
2563...	Cam shaft lever pin	1909-22	100		50		02.		7.	4
2564...	Lever clevis pin	1909-22	100		1 25		03.		65.	4
2566...	Hub brake shoe	1909-22	10				40.	MH.	2814.	2
2567...	Brake shoe support bolt	1909-22	20	70	3 00		05.		59.	2
2568...	Brake shoe support nut	1909-22	Order 2551B							
2570B...	Brake shoe coil spring	1913-22	20	35	1 50		03.		2862.	4
2571...	Universal joint assembly	1909-22	6				1 50.		151B.	1
2572...	Joint knuckle (male)	1909-22	2				50.		45B.	1
2573...	Joint knuckle (female)	1909-22	2				60.		46B.	1
2574...	Joint knuckle pin	1909-22	20	20	75		02.		6.	1
2575...	Joint ring, complete	1909-22	3				50.		49B.	1
2576...	Joint ring rivets (perset 4)	1909-22	20	12	50		05.		50.	4
2577B...	Univ. joint housing	1914-22	2				1 25.		7609.	1
2578...	Joint housing plug	1909-22	20	60	2 50		05.		75.	2
2579...	Ball joint grease cup	1909-22	10				15.		195.	1
2580...	Ball cap gasket	1909-22	20	80	3 50	25 00	05.		1518.	1
2581...	Drive shaft housing front bushing	1909-22	6				30.		69.	1
2582...	D. S. tubing	1911-22	2				7 00.	MH.	153B.	1
†2583B...	D. S. bearing housing	1920-22	2				1 40.	MH.	191C.	1
2584B...	D. S. R. B. cap screw	1912-22	20		3 00		05.		183B.	6
2584C...	D. S. R. B. stud nut	1912-22	20	50	2 00		05.		184R.	6
2584D...	D. S. R. B. cap screw lock washer	1912-22	100				doz. 05.		157.	6
2586...	D. S. R. B. housing set screw	1911-22	20	90	4 00		05.		101R.	1
2587...	D. S. roller bearing	1911-22	6				1 10.		108.	1

††When ordered to replace malleable type housing also order 2-2591 and 1-2591B

Of the net amount at which parts marked "MH" are billed to purchasers who purchase direct from the Ford Motor Company, 20/21 represents the price of the goods and 1/21 represents excise tax.

Part No.	Name of Part	Year	LIST PRICE				Each	Tax Status	Fac. No.	No. Req. per Car
			Minimum Whole-sale Quan.	Lots of 20 per lot	Lots of 100 per lot	Lots of 1000 per lot				
REAR AXLE—Continued										
2588	D. S. R. B. distance plate.	1911-21	20	\$0 25	\$1 00		\$0 05	MH.	106R	1
2589	D. S. ball race	1911-21	6				25		186R	1
2589B	D. S. ball bearing assy.	1911-21	6				1 00		185AR	1
2590	D. S. ball retainer	1911-21	20	40	1 75		03		190AR	1
2591	D. S. ball thrust collar.	1911-22	10				25		188	2
2591B	D. S. thrust ball and retainer assembly	1920-22	10				25		162	1
2592	D. S. ball bearing	1911-22	Order 2811							
2593	D. S. R. B. sleeve	1911-21	6				1 50		107R	1
2595B	D. S. only	1911-22	3				3 00	MH.	87D	1
2596	D. S. sleeve	1911-22	10				80		163B	1
2597B	D. S. pinion	1911-22	10				1 00	MH.	16C	1
2597C	D. S. pinion	1911-22	2				1 00	MH.	16D	1
2598	D. S. castle nut	1911-22	10				05		124	1
2598B	D. S. pinion key	1911-22	20	80	3 50		05		57B	1

REAR AXLE—60 INCH TREAD

2600C...	Rear axle housing—right	1915-16	2				12 00	MH.	2728C	1
2601C...	Rear axle housing—left	1915-16	2				12 00	MH.	2729C	1
2602B...	Rear axle shaft—tapered	1911-16	2				3 00	MH.	2725	2
2604...	Rear radius rod	1909-16	2				2 00		1726	2

FRONT AXLE

2691...	Front axle only	1909-22	2				9 00	MH.	202B	1
2694B...	Spindle body—right	1911-22	2				1 50	MH.	280	1
2695B...	Spindle body—left	1911-22	2				1 50	MH.	281	1
2696...	Spindle arm—right or lf.	1911-19	4				50	MH.	7716	2
2696C...	Spindle arm—right	1919-22	4				45	MH.	7715B	1
2696D...	Spindle arm—left	1919-22	4				45	MH.	7716B	1
2697...	Spindle arm nut	1911-22	Order 2548							
2704...	Stationary cone	1909-22	24				15		205A	2
2705...	Adj. cone—right thread	1909-22	24				15		206A	1
2706...	Adj. cone—left thread	1909-22	24				15		207A	1
2707...	Spindle nut—right thread	1909-22	20	1 60	7 00		10		209B	1
2708...	Spindle nut—left thread	1909-22	20	1 60	7 00		10		208B	1
2709...	Spindle washer	1909-22	20	25	1 00	\$ 6 00	02		210	2
2710...	Spindle bolt with oiler	1910-22	20	3 50	16 00		20		7708	2
2711...	Spindle bolt nut	1909-22	Order 2551B							
2713...	Spindle body bush (pair)	1909-22	20	3 80	16 00		20		223	2
2714...	Spindle arm bushing	1909-22	20	30	1 25	9 00	05		225	2
2715B...	Spindle bolt oiler assy.	1915-16	10				05		4081	2
2715C...	Spindle oiler	1909-18	Order 3846							
2715D...	Spindle oiler	1919-22	Order 3176C							
2717...	Spindle con. rod	1909-22	2				2 00	MH.	264	1
2718...	Spindle con. rod bolt with oiler	1909-22	20		12 00		15		7706	1
2719...	Spindle con.rod bolt nut	1909-22	100		2 50	15 00	03		220	2
2721...	Spindle con. rod yoke	1909-18	2				40		248	1
2721B...	Spindle con.rod yoke ball	1919-22	2				20		226	1
2721C...	Spindle con. rod yoke	1919-22	2				50		248B	1
2722...	Steering yoke clamp bolt and nut	1909-18	Order 3362 and 2515							
2725B...	Steering gear con. rod	1909-22	2				80	MH.	289	1
2728...	Ball socket cap	1909-22	6				10		254B	2
2729B...	Ball socket bolt and nut	1909-22	Order 3362 and 2515							
2733...	Front radius rod	1909-19	3				2 00	MH.	263A	1
2733B...	Front radius rod	1919-22	3				1 75	MH.	263B	1
2734...	Front radius rod nut	1909-19	Order 2548							
2736...	Front radius rod ball cap	1909-22	12				12		217	1
2737...	Front radius rod ball socket	1911-22	2				20		809B	1
2741...	Radius rod ball cap stud	1911-22	20	55	2 50		03		4365	2
2741B...	Radius rod ball cap stud nut	1911-22	Order 2515							
2742...	Radius rod ball cap spr'g	1911-22	20	40	1 75	10 00	03		292	2
2760...	Front axle only—60"	1911-16	2				10 00	MH.	1720B	1
2761...	Steering spindle con.rod—60"	1909-16	2				3 00	MH.	1725	1
2762...	Steer. gear con.rod—60"	1909-16	2				1 25	MH.	2739	1

WHEELS

2800...	Front wheel—clinch	1909-22	2				6 75		291B	2
2800B...	Front wheel—dem. less rim and brgs.—Kelsey	1919-22	2				7 25		291D	2
2800C...	Front wheel—dem. less rim and brgs.—Hayes	1919-22	2				7 25		291E	2
2800D...	Front wheel—clinch—less hub	1909-22	2				4 50		295AR	2
2800E...	F. and rear wheel—dem. less rim & hub—Kelsey	1919-22	2				4 75		293AR	4
2800F...	F. and rear wheel—dem. less rim & hub—Hayes	1919-22	2				4 75		293BR	4

††When substituting 2721C for old style yoke, also order 2721B Ball.

Of the net amount at which parts marked "MH" are billed to purchasers who purchase direct from the Ford Motor Company, 20/21 represents the price of the goods and 1/21 represents excise tax.

Part No.	Name of Part	Year	LIST PRICE				Each	Tax Status	Fac. No.	No. Req. per Car
			Minimum Whole-sale Quan.	Lots of 20 per lot	Lots of 100 per lot	Lots of 1000 per lot				
WHEELS—Continued										
2800G	Front wheel—dem.—less rim and brgs.—Ford	1919-22	2				\$ 7 25	MH.	291G	2
2800H	Frt. and rear wheel—dem. less rim & hub—Ford	1919-22	2				4 75	MH.	293CR	4
2801	Front wheel complete R. or L.—dem.—Kelsey	1919-22	2				9 75		7697A	2
2801B	Front wheel complete R. or L.—dem.—Hayes	1919-22	2				9 75		7697B	2
2801C	Front wheel complete—R. or L.—dem.—Ford	1919-22	2				9 75	MH.	7697C	2
2803	Front hub assy.	1909-22	4				1 80		200	2
2803B	Front hub with R B cups	1909-22	2				2 00		219	2
2804	Outer race	1909-22	12		\$8 00		10		234	2
2805	Inner race	1909-22	10		13 50		15		235	2
2806	Outer ball retainer	1909-22	20	\$0 25	1 00		02		236	2
2807	Inner ball retainer	1909-22	20	40	1 50		03		237	2
2808	Dust ring	1909-22	20	80	3 00		05		238	2
2809	Front & rear hub felt washer	1909-22	20	90	4 00	\$30 00	05		239	4
2810	Large balls	1909-22	100		3 50	30 00	04		241	24
2811	Small balls	1909-22	100		1 50	12 00	03		249	23
2814C	Rear wheel—clinch—	1912-22	2				7 25		2815	2
2814D	Rear wheel—clinch—less hub	1909-22	2				5 00		2816	2
2814E	Rear wheel complete—dem.—Kelsey	1919-22	2				9 50		7698A	2
2814F	Rear wheel complete—dem.—Hayes	1919-22	2				9 50		7698B	2
2814G	Rear wheel—dem. less rim—Kelsey	1919-22	2				7 00		2815B	2
2814H	Rear wheel—dem. less rim—Hayes	1919-22	2				7 00		2815C	2
2814J	Rear wheel—complete—dem.—Ford	1919-22	2				9 50	MH.	7698C	2
2814K	Rear wheel—dem.—less rim—Ford	1919-22	2				7 00	MH.	2815E	2
2815C	REAR HUB	1912-22	4				1 40	MH.	2819	2
2816B	Rear hub key	1912-22	20	35	1 50	12 00	03		2863	2
2818	Rear hub brake drum	1909-22	40				40		3B	2
2819	Hub cap	1909-22	20	2 80	12 50		15		7727	4
2825	Rear hub bolt	1911-22	100		1 75	9 00	03		28B	12
2825B	Hub bolt nut	1911-22	100		1 25	7 00	03		29	24
2826	Front hub bolt	1911-22	100		1 75	9 00	03		27	12
2827	Hub flange	1911-22	3				20		233B	4
2828	Rear hub lock nut	1912-22	20	90	4 00		05		242	2
2833	Front hub bear.cup inner	1919-22	6				50		2955	2
2834	Inside cone and roller assy	1919-22	6				1 10		205B	2
2836	Front hub bearing cup outer	1919-22	6				40		2956	2
2837	Outside cone and roller assy—right thread	1919-22	6				75		206B	1
2838	Outside cone and roller assy—left thread	1919-22	6				75		207B	1
2841	Front hub dust cap assy.	1919-22	12		8 00		10		350	2
2845	Demountable rim only—Kelsey	1919-22	2				1 80		8774A	4
2845B	Demountable rim only—Hayes	1919-22	2				1 80		8774B	
2845C	Demountable rim only—Ford	1919-22	2				1 80		8774C	4
2846B	Demountable rim clamp—Kelsey	1919-22	20	1 70	5 00		10		8831B	16
2846C	Dem. rim clamp and nut assy.—Ford	1922	20				10		8807	16
2847	Demountable rim bolt	1919-22	24		4 50		05		8832A	16
2847B	Demountable rim bolt—Ford	1922	24		4 50		05		8832BR	16
2848	Dem. rim nut—Hayes	1919-22	24		4 00		05		8834B	16
2848B	Dem. rim nut—Kelsey	1919-22	24		4 00		05		8834	16
2849	Spare rim carrier	1919-22	2				2 00	MH.	8848C	1
2849C	Spare rim carrier clamp support and bolt assy.	1921-22	4				15		7511	1
2849D	Spare rim carrier clamp	1921-22	4				05		7312C	1
2849E	Spare rim carrier clamp support bolt	1921-22	4				03		7509B	1
2870	Spare rim carrier brkt—R	1919-22	2				50		8824AR	1
2870B	Spare rim carrier brkt—R	1922	2				50		8824B	1
2871	Spare rim carrier brkt—L	1919-22	2				50		8825AR	1
2871B	Spare rim carrier brkt—L	1922	2				50		8825B	1

FRAME

2850...	Frame assembly	1909-22	2	13 00	MH.	2916	1
2851B...	Side member—right	1914-22	2	4 00		2914	1
2852B...	Side member—left	1914-22	2	4 00		2915	1
2853...	Front cross member	1909-22	6	90		303	1
2854B...	Rear cross member	1914-22	3	1 20		2913	1

Part No.	Name of Part	Year	Minimum	LIST PRICE			Tax Status	Fac. No.	No. Req. per Car
			Whole-sale Quan.	Lots of 20 per lot	Lots of 100 per lot	Lots of 1000 per lot			
FRAME—Continued									
2855	Front corner bracket—R.	1909-22	6				\$ 0 15	305	1
2856	Front corner bracket—L.	1909-22	6				15	306	1
2857	Rear corner bracket—R.	1909-22	6				15	307	1
2858	Rear corner bracket—L.	1909-22	6				15	308	1
2859	Front end spacer—L.	1909-22	6				10	318B	1
2860	Front end spacer—R.	1909-22	6				10	319B	1
2863	Body bracket	1909-22	6				15	344	4

GASOLINE TANK

2900B...	Gas tank—Sedan	1916-22	2			6 00	MH	7950	1
2900C...	Gasoline tank	1909-22	2			5 00	MH	1303B	1
2901...	Filling plug	1909-22	20	\$1 80	\$3 00	10		1317	1
2902B...	Sediment bulb	1909-22	6			90		2088	1
2908...	Pet cock	1909-22	Order 3079						
2909...	Feed pipe—40%	1909-22	4			20		1364	1
2909B...	Feed pipe—51%	1916-22	4			25		7965	1
2909C...	Feed pipe—66%	1918-19	4			40		9775R	1
2909D...	Feed pipe—56%	1919-22	4			30		8690	1
2909E...	Feed pipe—39%	1918-22	2			20		TT1364	1
2910...	Feed pipe pack nut	1909-22	20	90	4 00	05		1374	2
2911...	Feed pipe—78"	1915	4			70		1394R	1
2913...	Feed pipe gasket	1909-22	20		1 50	02		5892	1
2914...	Gas tank support—R.	1917-20	2			25		2132	1
2914B...	Gas tank support—R.	1920-22	2			20		2132B	1
2915...	Gas tank support—L.	1917-20	2			20		2133	1
2915B...	Gas tank support—L.	1920-22	2			20		2133B	1
2916...	Feed pipe clamp	1921-22	2			02		2118	1

MOTOR

*2990...	Motor assy	1909-22					MH	532C	1
†2991...	Cylinder assy	1909-22					MH	449	1
3000C...	Cylinder	1909-22	2			25 00	MH	400D	1
3000B...	Cylinder (bore $\frac{1}{8}$ " oversize)	1909-22	2			16 00	MH	400E	1
3001...	Cylinder head	1909-22	2			6 00	MH	401C	1
3002...	Cyl. head gasket	1909-22	20	6 50	30 00	35	MH	402B	1
3003...	Cyl. head cap screw	1909-17	20	70	3 00	05	MH	483B	15
3003B...	Cyl. head cap screw	1918-22	20	70	3 00	05	MH	483C	1
3004...	Cyl. head outlet con.	1909-16	6			35	MH	446C	1
3004B...	Cyl. head outlet con.	1917-22	6			35	MH	8719	1
3005...	Cyl. head out. con. gasket	1909-22	20	70	3 00	05	MH	445B	1
3006...	Cyl. head outlet hose	1909-22	20			15		448B	1
3007...	Cyl. head outlet hose clp	1909-22	20	80	3 50	05		607B	2
3008...	Cyl. head out. con. screw	1909-22	20	50	2 00	05		550C	2
3009B...	Cyl. front cover	1909-19	2			1 00	MH	690B	1
3009C...	Cyl. front cover	1919-22	2			1 00	MH	690C	1
3010...	Cyl. cover bolt and nut	1909-22	Order 4808 and 2515						
3011...	Cyl. cover cap screw	1909-22	20	40	1 75	03		432	3
3012...	Cyl. cover felt	1909-22	20	90	4 00	05		504	1
3013...	Cyl. cover liner	1909-19	20	25	1 00	02		505B	1
3013B...	Cyl. cover liner	1919-22	20	25	1 00	03		505C	1
3014...	Cyl. cover and crank case bolt and nut	1909-22	Order 3362 and 2515						
3015...	Cyl. water inlet con.	1909-22	6			30	MH	442B	1
3016...	Cyl. inlet con. screw	1909-22	20	50	2 00	05		597	2
3017...	Time gear cover	1919-22	4			1 00	MH	1754	1
3017B...	Time gear cover	1919-22	4			80	MH	1769	1
3017C...	Time gear cover gasket	1919-22	100	1 00		02		1775	1
3017D...	Time gear cover plate	1919-22	6			05	MH	1773	1
3018...	Cyl. water inlet gasket	1909-22	20	50	2 00	05	MH	596	1
3019...	Cyl. water jacket plug	1909-13	10			05		557	3
3019B...	Cyl. water jacket plug	1914-22	20	50		02		5919	3
3020...	PISTON COMPLETE	1909-22	10			1 70	MH	586C	4
3020C...	PISTON COMPLETE	1909-22	10			1 70	MH	586DR	4
3020D...	PISTON COMPLETE	1909-22	10			1 70	MH	586ER	4
3020E...	PISTON COMPLETE	1909-22	10			1 70	MH	586FR	4
3020F...	PISTON COMPLETE	1909-22	10			1 70	MH	586GR	4
3021...	Piston only	1909-22	10			1 00	MH	418C	4
3021B...	Piston only—.0025" O. S.	1909-22	10			1 00	MH	418DR	4
3021C...	Piston only—.03125" O. S.	1909-22	10			1 00	MH	418ER	4
3021D...	Piston only—.033" O. S.	1909-22	6			1 00	MH	418FR	4
3021E...	Piston only—.005" O. S.	1909-22	10			1 00	MH	418GR	4
3022...	Piston pin	1909-22	20			25		419B	4
3022½...	Piston pin bushing (pair)	1909-22	10		20 00	25		668	4
3023...	Piston ring	1909-22	20	2 70	12 00	15		422C	12
3023B...	Piston ring	1909-22	20	2 70	12 00	15		422ER	12
3023C...	Piston ring	1909-22	20	2 70	12 00	15		422DR	12
3023D...	Piston ring	1909-22	20	2 70	12 00	15		422FR	12
†3024...	CONNECTING ROD	1909-22	10			1 20	MH	641	4
*3024B...	Connecting rod	1909-22	8			1 20	MH	641AR	4
3025...	Con. rod cap bolt	1909-22	20	80	3 50	05		489B	8

*Specify with or without starter—Inquire of Branch for price.

xWhen used on car not equipped with starter also order 3017B, 3017C, 3011, 3008 and 3016.

†Used with 3000C cylinder on cars not equipped with starter.

‡Connecting rods requiring new bearings will be exchanged by dealers at 60c each.

*Special rod for crankshafts worn .025" undersize.

††Inquire of Branch for price.

Of the net amount at which parts marked "MH" are billed to purchasers who purchase direct from the Ford Motor Company, 20/21 represents the price of the goods and 1/21 represents excise tax.

Part No.	Name of Part	Year	LIST PRICE				Each	Tax Status	Fac. No.	No. Req. per Car
			Minimum Whole-sale Quan.	Lots of 20 per lot	Lots of 100 per lot	Lots of 1000 per lot				
MOTOR—Continued										
3026	Con. rod cap bolt nut	1909-22	20	\$0 60	\$2 50	15 00	\$ 0 05		490	8
3029	Con. rod clamp screw	1909-22	20	70	3 00		05		578	4
3030	CRANK SHAFT	1909-22	2				9 00	MH	498B	1
3031	C. S. rear bearing cap	1909-22	6				50		405AR	1
3032	C. S. front bearing cap	1909-22	6				40		406B	1
3033	C. S. center bearing cap	1909-22	6				40		407B	1
3034	C. S. bearing bolt—center and front	1909-22	10				10		408	4
3035	C. S. bearing bolt nut	1909-22	Order 2551B				10		478	2
3036	C. S. rear bearing bolt	1909-22	10							
3038	C. S. bearing liner—center and front	1909-22	100		50	2 50	01		502B	8
3039	C. S. rear bearing liner	1909-22	100		50	2 50	01		503B	4
3040	C. S. starting pin	1909-20	20	60	2 50		05		529B	1
3040B	C. S. starting pin	1920-22	20	60	2 50		05		529C	1
3041	CAM SHAFT	1909-22	2				2 50	MH	410	1
3042	Cam shaft front bearing	1909-22	10				30		411	1
3043	Camshaft center bearing	1909-22	10				30		412B	1
3044	Cam shaft rear bearing	1909-22	10				15		413	1
3045	Cam shaft bearing ring	1909-22	20	25	1 00		03		534	2
3046	Camshaft bearing setscrew	1909-22	20	70	3 00		05		414	2
3047B	Time gear—large	1909-22	6				90	MH	415B	1
3048B	Time gear—small	1909-22	6				60	MH	416B	1
3049	Cam shaft gear dowel pin	1909-22	20	30	1 25		02		417	2
3050B	Cam shaft gear lock nut	1909-22	10				10		4453	1
3051	Small time gear key	1909-22	20	50	2 00		05		477	1
3052	Valve	1909-22	32		14 00		15	MH	424B	8
3052B	Valve—O. S. stem	1909-22	16		14 00		15	MH	424AR	8
3053½	Valve bushing	1909-22	10				30		428	8
3054	Valve spring	1909-22	20		4 00		05		431	8
3056	Valve spring seat	1909-22	100		40	3 00	Set/05		425	8
3057	Valve spring seat pin	1909-22	100		40	2 00	of 8/05		429	8
3058	Push rod	1909-22	20	1 80	8 00		10	MH	426B	8
3058B	Push rod—O. S. stem	1909-22	20	1 80			10	MH	426AR	8
3059½	Push rod bushing	1909-22	6				25		427	8
3060B	Exhaust manifold	1913-22	3				1 25	MH	4483	1
3061	Exhaust pipe pack nut	1909-22	10		15 00		20		518	1
3062	Inlet pipe	1909-22	3				1 00	MH	512B	1
3063	Inlet and exh. pipe gasket	1909-22	100		2 00	15 00	03	MH	513	6
3064	Inlet and exh. pipe gland	1909-22	100		1 00	8 00	02		514	6
3065	Inlet and exh. pipe clamp	1909-22	10				10	MH	515	4
3066	Inlet and exh. clamp stud	1909-22	20	60	2 50		05		516	4
3066B	Inlet and exh. clamp stud nut	1909-22	100		1 25	8 00	03		517	4
3068	Breather pipe	1909-22	10		8 00		10	MH	4468	1
3069B	C. C. front end support	1911-17	2				1 00		801C	1
3069C	C. C. front end support	1917-22	2				50		801D	1
3070B	C. C. & cyl. gasket—L.	1909-22	20	70	3 00		05		886	1
3071B	C. C. & cyl. gasket—R.	1909-22	20	70	3 00		05		887	1
3072	C. C. & cyl. cover cap screw	1909-22	20	55	2 00		03		1388	2
3073	C. C. arm bolt—side	1909-22	20	60	2 50		05		479	2
3074	C. C. arm bolt—top	1909-22	20	50	2 00		05		940	2
3074B	C. C. arm bolt nut	1909-22	Order 2515							
3075B	C. C. frt. bearing & spring clip assy	1921-22	2				90		2921B	1
3076B	C. C. front bearing and spring clip	1921-22	6				60		320C	1
3076C	C. C. front bearing and spring clip nut	1921-22	Order 2548				15		321	1
3077	C. S. front bearing cap	1909-22	6				05		322	2
3078	C. C. front bearing screw	1909-21	20	60	2 50					
3078B	C. C. front bearing screw	1921-22	Order 3008							
3078C	C. C. front bearing lock washer	1921-22	20		50		01		5636	2
3079	C. C. oil cock	1909-22	10		12 00		15		1515	2
3080	C. C. drain cup plug	1909-22	Order 2532							
3080B	C. C. drain cup plug gasket	1909-22	20	40	1 75		03	MH	4339	1
3081	C. C. oil tube	1909-22	6				20		543B	11
3083	C. C. arm block	1909-22	6				05		890	2
3084	Engine pan—right	1909-22	6				35	MH	1330	1
3085	Engine pan—left	1909-22	6				35	MH	1331B	1
3088B	Engine pan and hood board bolt	1909-22	100		1 50		03		4074	2
3088C	Engine pan and hood board bolt	1909-22	100	35	1 50		03		4073	2
3088D	Engine pan and hood board bolt—Truck	1918-22	20		1 50		03		TT4073	2
3088E	Engine pan and hood board bolt nut	1909-22	100		1 00	7 00	02		1309	
3100	CRANK CASE	1912-22	2				12 00	MH	1526E	1
3101	Crank case lower cover	1912-22	2				40	MH	1582	1
3101B	Crank case lower cover reinforcement	1912-22	4				30		4378-4379	1
3102B	C. C. lower cover gasket	1912-22	20	1 40	6 00		10		1586	

Part No.	Name of Part	Year	LIST PRICE				Tax Status	Fac. No.	No. Req. per Car
			Minimum Wholesale Quan.	Lots of 20 per lot	Lots of 100 per lot	Lots of 1000 per lot			
MOTOR--Continued									
3103...	C. C. lower cover screw...	1912-22	20	\$0 25	\$1 00		\$0 03.	4328	14
3110...	Cylinder valve cover...	1912-22	4				15. MH.	656A.	2
3110B...	Cylinder valve cover...	1921-22	4				20. MH.	656B.	1
3111B...	Cyl. valve cover gasket...	1912-22	20	60	2 50		05.	660A.	2
3111C...	Cyl. valve cover gasket...	1921-22	20	1 20	5 00		10.	660B.	1
3112...	Cyl. valve cover screw...	1912-22	20	35	1 50		02.	654.	2
3114...	C. C. arm with rivets...	1909-22	6				30.	815B.	2
3115...	C. C. arm rivet...	1909-22	50				doz. 05.	312.	

COMMUTATOR

3162...	Com. case support bolt...	1912-19	10				05.	4441	1
3162B...	Com. case support bolt...	1919-22	10				05.	1756	1
3163...	Com. case spring...	1912-22	10				05.	689	1
3165...	Com. brush only...	1912-22	20				30.	4481	1
3176...	Com. oiler...	1912-16	10				05.	2383	1
3176B...	Com. oiler...	1917-18	Order 3846						
3176C...	Com. oiler...	1919-22	20	80	3 50		05.	480C	1
3177...	Com. felt ring...	1912-22	20	30	1 25		02.	5930	1
3206...	Com. brush cap...	1909-22	20	35	1 50		02.	468B	1
3207...	Com. brush cap pin...	1909-22	100		50.		01.	466	1
3210...	Com. contact point nut...	1910-22	100		75.		02.	472B	8
3220...	Com. lock nut...	1909-22	20	50	2 00		05.	471	1
3221...	Com. case with fibre...	1912-22	20				60.	5908	1
3222...	Com. shield...	1912-22	20	35	1 50		02.	5923	1

MAGNETO

3250D...	Magneto coil assembly...	1915-22	2				6 00.	5941B	1
3252...	Magneto spool support screw...	1909-22	Order 3371						
3254...	Magnet bolt...	1909-22	20	50	2 00.		03.	537B	16
3255B...	Magnet bolt washer...	1911-22	20		50.		01.	624	16
3257...	Magnet brass support...	1909-22	20	80	3 50.		05.	535C	16
3260...	Magneto contact assy...	1909-22	10		15 00.		20. MH	1545	1
3261B...	Magneto contact nut...	1909-22	20		50.		01.	1508	2
3261C...	Magneto contact screw washer...	1909-22	20		50.		01.	1565	1
3262...	Magneto contact spring...	1909-22	20	70	3 00.		05.	1509	1
3262B...	Magneto contact screw and spring assembly...	1919-22	10		7 50.		10.	4350	
3266...	Magneto contact fibre screw...	1909-22	20		50.		01.	1505	3
3267...	Magneto primary insulating block...	1915-22	10				05.	4382	
3267B...	Magneto contact insulator...	1919-22	10				05.	1503B	
3267C...	Magneto contact insulator shell...	1919-22	10				03.	8611	
3268...	Fly wheel ring gear...	1919-22	2				1 25. MH	1885	1
3269C...	Fly wheel...	1911-19	2				6 00. MH	701B	1
3269G...	Fly wheel...	1919-22	2				5 00. MH	701C	1
3269H...	Fly wheel with ring gear and magnets assembled...	1919-22	2				15 00. MH	5946B	1
3270...	Fly wheel cap screw...	1909-22	20		8 00.		10.	721	4
3271...	Fly wheel dowel pin...	1909-22	20	80	3 50.		05.	722	2
3272...	Magneto coil support shim...	1909-22	10		3 50.		05.	584	1
3276B...	Magnet (16)...	1915-22	2			set	5 00.	5933	16
3277...	Magnet clamp...	1911-22	20	50	2 00.		03.	623	16
3277B...	Magnet clamp...	1913-14	20				10.	4499	16
3278...	Magnet clamp screw...	1911-22	20	50	2 00	\$16 00	03.	625	16
3279...	Magneto contact washer...	1909-22	20	16	75.		01.	560	1

TRANSMISSION

3300B...	Transmission assy...	1919-22	2				35 00. MH	744C	
3301...	Trans. reverse plate assy...	1909-22	4				2 75. MH	747	1
3304...	Trans. reverse gear bushing...	1909-22	6				50.	705	1
3305...	Trans. rev. and S. S. rivet...	1909-22	60			doz. 05.		708	8
3306...	Trans. slow speed plate assy...	1909-22	4				2 50. MH	748	1
3309...	Trans. slow speed gear bushing...	1909-22	6				35.	745	1
3310...	Trans. brake drum rivet...	1909-22	60			doz. 05.		711	8
3311...	Trans. brake drum assy...	1909-22	4				2 70. MH	750	1
3313...	Trans. triple gear assy...	1909-22	3				1 50. MH	751B	3
3314 1/2...	Trans. triple gear flanged bushing...	1911-22	12				25.	716B	3
3315...	Trans. triple gear shaft...	1909-22	6				15.	715	3
3316...	Trans. triple gear riveting pin...	1909-22	36			doz. 05.		720	24
3317...	Trans. driven gear...	1909-22	3				80. MH	713	1
3318...	Trans. driven gear key...	1909-22	12				03.	714	2
3320C...	Trans. driven gear sleeve bushing...	1909-22	6				20.	712	2

Of the net amount at which parts marked "MH" are billed to purchasers who purchase direct from the Ford Motor Company, 20/21 represents the price of the goods and 1/21 represents excise tax.

Part No.	Name of Part	Year	LIST PRICE				Tax Status	Fac. No.	No. Req. per Car
			Minimum Wholesale Quan.	Lots of 20 per lot	Lots of 100 per lot	Lots of 1000 per lot			
TRANSMISSION—Continued									
3320D...	Driven gear sleeve washer	1909-22	12				\$ 0 05.	776	3
3321...	Trans. driving plate assy.	1909-22	2				3 00. MH	749	1
3323...	Trans. driving plate screw	1909-22	Order 3371						
3325...	Trans. driving plate rivet.	1909-22	60				doz. 05.	736	8
3327B...	Trans. driving plate bush.	1909-22	6				15.	772	1
3328...	Trans. clutch disc—small	1909-22	16		\$8 00		10. MH	727	12
3329...	Trans. clutch disc—large	1909-22	16		8 00		10. MH	728	13
3331...	Trans. gear shaft.	1909-22	3				1 50. MH	723B	1
3332...	Trans. clutch disc drum	1909-22	3				1 25. MH	725B	1
3333...	Trans. clutch disc drum key	1909-22	10		4 00.		05.	726B	1
3334...	Trans. clutch disc drum set screw	1909-22	10		4 00.		05.	752	1
3336...	Trans. clutch push ring.	1909-22	6				35. MH	770	1
3337...	Trans. clutch finger	1909-22	6				15.	732B	3
3337 1/2...	Trans. clutch finger screw	1909-22	6		3 00.		05.	756	3
3337B...	Trans. clutch finger and screw	1909-22	6				20.	765	3
3338...	Trans. clutch finger pin.	1909-22	10				01.	735	3
3340...	Trans. clutch spring.	1909-22	6				35.	737	1
3341...	Trans. clutch spring support.	1909-22	6				15. MH	738	1
3342...	Trans. clutch spring thrust ring pin.	1909-22	20	\$0 50	2 00.		05.	739	1
3344...	Trans. clutch shift.	1909-22	6				50. MH	733	1

TRANSMISSION COVER

3362...	Trans. cover bolt...	1909-22	100		2 00	\$15 00	05.	79	
3362B...	Trans. cover bolt nut...	1909-22	Order 2515						
3363...	Trans. cover gasket (front)...	1909-22	20	35	1 25.		05.	872B	1
3363B...	Trans. cover gasket—short...	1909-22	20		1 00.		03.	4358	1
3367...	Trans. cover door screw...	1909-22	20	25	1 00.		02.	430	6
3368...	Universal ball cap (rear)...	1909-22	4				30. MH	818	1
3369...	Universal ball cap (front)...	1909-22	4				80. MH	819D	1
3371...	Universal ball cap screw...	1909-22	20	50	2 00	14 00	03.	731	2
3372...	Universal ball cap bolt and nut...	1909-22	Order 3362 and 2515						
3375...	Trans. cover screw...	1909-22	Order 3072						
3376B...	TRANS. COVER...	1919-22	2				6 50. MH	826E	1
3377B...	Trans. cover gasket...	1909-22	20	1 80	8 00.	pr	15.	885B	1
3378...	Trans. cover door...	1911-22	4				15. MH	1546D	1
3379B...	Trans. cover door gasket...	1911-22	20	90	4 00.		05.	1547C	1
3380...	Bendix cover...	1919-22	4				20. MH	1763	1
3381...	Bendix cover gasket...	1919-22	20	50	2 00.		03.	1764	1
3382...	Trans. cover rear plate...	1919-22	4				05. MH	1761	1
3383...	Trans. cover front plate...	1919-22	4				10. MH	1758	1

TRANSMISSION CONTROL

3400...	Trans. clutch release ring...	1909-22	4				20.	741	1
3402D...	Clutch lever and shaft...	1913-22	4				35.	1548	
3403...	Clutch lever screw...	1909-22	Order 3973						
3403B...	Clutch lever screw nut...	1909-22	Order 3066B						
3405...	Clutch lever pin...	1909-22	10		1 00.		02.	1553	1
3405B...	Clutch release fork—RorL...	1913-22	4				15.	4345	2
3406C...	Clutch release fork pin...	1913-22	Order 3405						
3408...	Clutch release fork key...	1909-14	10		3 00.		05.	836	2
3409...	Clutch release fork clamp screw...	1909-14	10				10.	835	2
3411...	Clutch lever clevis pin...	1909-22	Order 2564						
3413...	TRANSMISSION BAND ASSEMBLY...	1909-22	6				60. MH	838B	3
(Bands will be exchanged by dealers at 45 cents each)									
3415...	Trans. band washer...	1909-22	20	40	1 75.		03.	840	2
3416...	Trans. band lining...	1909-22	24				15. MH	1562A1	3
3416B...	Trans. band lining—set of 3 inc. rivets—in carton...	1909-22	8		55 00.	set	65.	1564	1
3419...	Trans. band adj. screw...	1909-22	12		7 50.		10.	1533	1
3420...	Trans. band adj. screw nut...	1909-22	20	60	2 50.		05.	1532	1
3421B...	Trans. band ear iron rivet...	1909-22	100			2 00 doz. 05.		843	12
3422B...	Trans. band brass rivet...	1909-17	1000			3 60 doz. 05.		844B	6
3423B...	Trans. band brass rivet...	1909-22	1000			2 50 doz. 05.		845B	24
3425...	Trans. band spring...	1909-22	20	50	2 25.		05.	841B	3
3426...	Trans. band adj. nut...	1909-22	20	50	2 00.		05.	851	2
3427...	Slow speed shaft...	1909-22	6				15.	848B	1
3428...	Slow speed notch...	1909-22	6				30.	4327	1
3429...	Slow speed notch pin...	1909-22	10		1 00.		02.	1560	1
3432...	Speed lever...	1909-22	2				10.	862B	1
3434...	Reverse pedal...	1909-22	2				60. MH	4324	1

†When using short bushing in making repairs remove driving plate key.

†When ordered to replace cover on cars below 2044100 also order 3402D clutch lever and shaft.

Of the net amount at which parts marked "MH" are billed to purchasers who purchase direct from the Ford Motor Company, 20/21 represents the price of the goods and 1/21 represents excise tax.

Part No.	Name of Part	Year	LIST PRICE				Each	Tax Status	Fac. No.	No. Req. per Car
			Minimum Whole-sale Quan.	Lots of 20 per lot	Lots of 100 per lot	Lots of 1000 per lot				
TRANSMISSION CONTROL—Continued										
3435	Brake and rev. pedal shaft	1909-22	10				\$0 15		849B	2
3436	Brake and rev. pedal support	1909-22	6				20		4325	2
3437	Brake and rev. support bolt	1909-22	20	\$0 50	\$2 00		05		1534	2
3437B	Brake and rev. support bolt nut	1909-22	Order 2515							
3439	Brake pedal	1909-22	2				60	MH	4323	1
3440	Clutch pedal	1909-22	2				60	MH	854B	1
3441	Pedal pin	1909-22	Order 3405							
3442	Clutch pedal support	1909-22	6				20		4326	1
3443	Clutch pedal support bolt	1909-22	20	50	2 00		05		1536	1
3443B	Clutch pedal support bolt nut	1909-22	Order 2515							
3445	Slow speed connection	1909-22	6		3 50		05		1540	1
3446	Slow speed con. lock nut	1909-22	Order 2503F							
3447	Slow speed con. clevis	1909-22	6		7 00		10		802	1
3448	Controller quadrant	1909-22	3				20		309B	1
3449	Con. shaft with speed lever	1909-22	2				70	MH	1557	1
3450	Controller shaft bracket	1909-22	3				15		311	2
3452	Controller shaft bracket bolt	1909-22	20	50	2 00	\$15 00	03		315	4
3452B	Controller shaft bracket bolt nut	1909-22	20	30	1 25	9 00	02		316	4
3455	Hand brake lever	1909-22	2				1 00	MH	1550	1
3456B	Hand brake lever pin	1909-22	Order 2574							
3457	Hand brake lever key	1909-17	6				05		874	1
3458	Hand brake lever pawl	1909-22	10		7 50		10		875	1
3459	Hand brake lever pawl pin	1909-22	100		1 00		02		876	1
3460	Hand brake lever pawl rod	1909-22	2				10		877	1
3462	Hand brake lever pawl lift assy.	1909-22	4				10		4363	1
3463	Hand brake lever pawl lift spring	1909-22	10				02		888	1
3465	Hub brake lever	1909-22	6				20		864	1
3466	Hub brake lever pin	1909-22	Order 3405							
3467	Hub brake lever clevis	1909-22	Order 3447							
3468	Hub brake pull rod—R	1909-22	6				40	MH	891B	1
3469	Hub brake pull rod—L	1909-22	6				40	MH	1513B	1
3470	Brake rod support—R	1909-22	6	1 40	5 00		10		1367C	1
3471	Brake rod support—L	1909-22	6	1 40	5 00		10		1398C	1
3472	Brake rod support bolt	1909-22	100		1 25	6 00	03		1308	2
3472B	Brake rod sup. bolt nut	1909-22	Order 3088E							
STEERING GEAR										
3500C	Steering gear assy.	1911-22	2				10 00	MH	5044	1
3501C	St. gear rim	1920-22	2				75		901C	1
3502	St. gear rim screw	1909-22	24				01		6849	4
3503D	St. gear spider	1920-22	2				50		902C	1
3503E	St. gear spider and rim	1909-22	2				1 25	MH	995A2	1
3504	St. gear cover	1909-22	2				35		5039	1
3505	St. gear cover screw	1909-22	24				01		910	1
3506	St. gear cover bushing	1909-22	6				15		914	1
3506B	St. gr. driv. pinion washer	1909-22	10				02		5026	1
3507	St. gr. int. gear case and bushing	1909-22	2				1 00		5036	1
3509	St. gear quadrant	1909-22	2				15		906B	1
3510	St. gear quadrant rivet	1909-22	24		50		01		5041	2
3511	St. gear wheel nut	1909-22	12		7 50		10		913	1
3512C	St. gear tubing assy	1912-22	2				4 00		5016	1
3513C	St. tubing flange screw	1913-22	20	25	1 00		03		5018	3
3514	St. tub. flange screw nut	1913-22	100		75	6 00	02		926	1
3516C	St. gear post	1912-22	2				1 75		5043	1
3516D	St. gear post	1922	2				1 75		5043B	1
3517	St. gear pinion	1909-22	10				15		916	3
3518	St. gear pinion pin—short	1909-22	10				03		917	2
3518B	St. gear pinion pin—long	1921-22	6				03		918	1
3519	St. gear drive pinion	1909-22	3				30		911	1
3520	St. gear drive pinion key	1909-22	10		1 50		03		909	1
3523	St. gear post castle nut	1909-22	Order 2551B							
3524E	Throttle rod	1912-22	2				30		5038	1
3525E	Lead rod	1912-22	2				30		5037	1
3527	Lead & throttle rod spring	1909-22	10		1 00		02		935	2
3528	Lead & throttle rod collar	1909-22	10		50		02		936	2
3529	Lead & throttle rod pin	1909-22	10		7 50		01		937	5
3530	Lead rod lever	1909-22	6		7 50		10		946	1
3531	Throttle rod lever	1909-22	6		7 50		10		947	1
3532	Lead & throttle rod guide	1909-22	6		3 00		05		938	1
3534B	Commutator pull rod	1912-22	6				10		2082	1
3535	Carburetor pull rod	1909-22	6		7 50		10		1329	1
3536	Ball & socket joint	1909-22	20	1 70	7 50		10		1326	1
3537	Ball & socket joint nut	1909-22	20	25	1 00		02		1327	1
3539B	St. brkt. with bushing	1911-22	3				75		996	1
3539C	St. brkt. with bushing—Truck	1918-22	2				75		TT996	1

Of the net amount at which parts marked "MH" are billed to purchasers who purchase direct from the Ford Motor Company, 20/21 represents the price of the goods and 1/21 represents excise tax.

Part No.	Name of Part	Year	LIST PRICE				Each	Tax Status	Fac. No.	No. Req. per Car
			Minimum Whole-sale Quan.	Lots of 20 per lot	Lots of 100 per lot	Lots of 1000 per lot				
STEERING GEAR—Continued										
3540	Brkt. bolt and nut—long	1909-22	Order 3073 and 2515							
3541	Brkt. bolt and nut—short	1911-22	Order 3074 and 2515							
3544	St. brkt. felt washer	1909-22	12				\$0 03		943	1
3545	St. brkt. bushing	1909-22	4				20		944-5027	1
3546	St. brkt. block	1909-22	6				10		945	1
3546B	St. brkt. block—Truck	1918-22	4				05		TT945	1
3547	St. gear ball arm	1909-22	6				40		929B	1
3548	St. gear ball arm key	1909-22	20	\$0 50	\$2 00		05		930	1
3549	St. brkt. dust cap—Truck	1918-22	10				05		TT5044	1
BODY PARTS										
3601B	Body brkt. on body	1910-22	10				10		1624	6
3601C	Body brkt.—front—R	1921-22	10				20		7267B	1
3601D	Body brkt.—front—L	1921-22	10				20		7268B	1
3601E	Body bracket—rear	1913-22	10				05		5650	2
3601F	Body bracket—rear—R	1921-22	10				15		7137C	1
3601G	Body bracket—rear—L	1921-22	10				15		8001B	1
3602E	Body brkt. con. bolt	1916-22	30				03		2431	6
3602F	Body brkt. con. bolt nut	1916-22	Order 2719							
3624E	Front floor rubber mat	1915-22	4				1 00		7299	1
3626C	Floor board with plate (first)	1915-22	2				45		4200	
3627C	Floor board with plate (second)	1915-22	2				45		4201	
3628B	Floor board with plate (third)	1915-22	2				65		7104	
3630	Floor board forward plate for pedals	1909-22	2				10		1400C	1
3632	Floor board rear plate for pedals	1909-22	2				10		1095C	1
3633	Floor board plate for side lever	1909-22	2				05		1094B	1
3634E	Dash	1915-16	2				5 00		7462	1
3634G	Dash	1917-22	2				2 50		8754	1
3638B	Dash shield	1919-22	4				10		5432B	1
3639	Dash weatherstrip—side	1917-22	6				05		8747	2
3639B	Dash weatherstrip—top	1917-22	6				20		8752	1
3640C	Dash brkt.—left	1917-22	6				15		8722	1
3641C	Dash brkt.—right	1917-22	6				15		8721	1
3642B	Dash brkt. to dash bolt	1917-22	20	50	2 00		03		8740	4
3642C	Dash brkt. to dash nut	1917-22	Order 3514							
3645	Dash brkt. to dash bolt	1909-16	30				03		2427	2
3645B	Dash brkt. to dash nut	1909-16	Order 4805C							
3653B	Dash to body brkt. bolt	1915-22	20	25	1 00		03		4248	2
3653C	Dash to body brkt. nut	1915-22	Order 4805C							
3654	Dash to body gasket	1918-22	12		3 50		05		8769	
3660C	Lamp & license brkt. assy	1915-22	4				25		7506	1
3660D	Lamp & license brkt. assy	1915-22	4				25		7505	1
3662	Front license brkt.—R	1920	4				10		287	1
3663	Front license brkt.—L	1920	4				10		288	1
3664	Front license bracket	1921-22	4				15		493	1
3667E	Front seat cushion	1909-21	2				6 00	MH	8076A	1
3667F	Front seat cushion	1921-22	2				6 00	MH	8076B	1
3670D	Rear seat cushion	1909-21	2				6 50	MH	7032A	1
3670E	Rear seat cushion	1921-22	2				6 50	MH	7032B	1
3676B	Rear floor mat	1911-21	2				1 25		1606B	1
3676C	Rear floor mat	1921-22	2				1 00		1606C	1
SPRINGS										
3800	Front spring	1909-22	4				2 50	MH	332	1
3801	First leaf (main leaf)	1909-22	6				80		2943	1
3802B	Second leaf	1909-22	6				50		2935	1
3803	Third leaf	1909-16	2				40		356	1
3803B	Third leaf	1916-22	6				40		2936	1
3804	Fourth leaf	1909-16	2				30		357	1
3804B	Fourth leaf	1916-22	6				30		2937	1
3805	Fifth leaf	1909-16	2				25		358	1
3805B	Fifth leaf	1916-22	6				25		2938	1
3806	Sixth leaf	1909-16	2				20		359	1
3806B	Sixth leaf	1916-22	6				20		2939	1
3807	Seventh leaf	1909-16	2				15		360	1
3807B	Seventh leaf	1916-22	6				15		2947	1
3808	Front spring clip	1909-22	10				20		325C	2
3809	Front spring clip nut	1909-22	Order 2551B							
3810	Front spring clip bar	1921-22	6				25		342	1
3811	Front spring tie bolt	1909-22	20	35	1 50		04		1362	1
3811B	Front spring tie bolt nut	1909-22	20	25	1 00		02		1363	1
3813	Front spring hanger	1909-22	12		12 00		15		246B	4
3815	Spring hanger nut	1909-22	Order 2719							
3817	Spring hanger oiler	1909-16	Order 2715							
3818	Front spring perch—right	1909-19	4				60	MH	274A	1
3818B	Front spring perch—right	1919-22	6				60	MH	274B	1
3819	Front spring perch—left	1909-19	4				60	MH	275A	1
3819B	Front spring perch—left	1919-22	6				60	MH	275B	1
3820	Front spring perch bush	1909-22	20	50	2 00		05		239	

Part No.	Name of Part	Year	Minimum Whole- sale Quan.	LIST PRICE			Each	Tax Status	Fac. No.	No. Req. per Car
				Lots of 20 per lot	Lots of 100 per lot	Lots of 1000 per lot				
SPRINGS—Continued										
3821	Front spring perch nut	1909-21	Order 2828							
3821B	Front spring perch nut	1921-22	12				\$ 0 05		240	1
3823	Front spring leather	1909-22	20	\$1 50	\$ 6 00.		10		262	1
3824	REAR SPRING	1909-22	3				7 00	MH	333	1
*3824B	REAR SPRING	1922	2				7 25	MH	388	1
3825	First leaf (main leaf)	1909-19	2				1 50		361A	1
3825B	First leaf (main leaf)	1918-22	3				1 50		355	1
*3825C	First leaf (main leaf)	1922	2				1 50		389	1
3826	Second leaf	1909-19	2				1 25		362A	1
3826B	Second leaf	1918-22	3				1 25		362B	1
*3826C	Second leaf	1922	2				1 25		391	1
3827	Third leaf	1909-19	2				1 10		363A	1
3827B	Third leaf	1918-22	3				1 10		363B	1
*3827C	Third leaf	1922	2				1 10		392	1
3828	Fourth leaf	1909-19	2				95		364A	1
3828B	Fourth leaf	1918-22	3				95		364B	1
*3828C	Fourth leaf	1922	2				95		393	1
3829	Fifth leaf	1909-19	2				80		365A	1
3829B	Fifth leaf	1918-22	4				80		365B	1
*3829C	Fifth leaf	1922	2				80		394	1
3830	Sixth leaf	1909-19	2				65		366A	1
3830B	Sixth leaf	1918-22	4				65		366B	1
*3830C	Sixth leaf	1922	2				65		395	1
3831	Seventh leaf	1909-19	2				55		367A	1
3831B	Seventh leaf	1918-22	4				55		367B	1
*3831C	Seventh leaf	1922	2				55		396	1
3832B	Eighth leaf	1909-22	4				45		368B	1
*3832C	Eighth leaf	1922	2				45		397	1
*3832D	Ninth leaf	1922	2				45		398	1
3833	Rear spring clip	1909-22	10				20		326	2
*3833B	Rear spring clip	1922	5				20		1737	2
3834	Rear spring clip nut	1909-22	Order 2548							
3835	Rear spring clip bar	1909-22	10				10		329	2
3837	Rear spring tie bolt	1909-22	20	35	1 50.		04		1352	1
3837B	Rear spring tie bolt nut	1909-22	20	25	1 00.		02		1353	1
*3838	Rear spring tie bolt	1922	10				04		1355	1
3840	Rear spring hanger	1909-22	10		12 00.		15		91 B.	4
3842	Rear spring leather pad	1909-22	10				05		94	1
3843	Rear spring perch	1909-22	6				40	MH	2804	2
3844	Rear spring perch bush	1909-22	20	70	3 00.		05		172	4
3845	Rear spring perch nut	1909-22	20		4 00.		05		174	2
3846	Spring perch oiler	1917-22	20	70	3 00.		05		2944	4
3847	Front spr'g clamp assem- bly with bolt and nut	1909-16	20	1 50	6 00.		10		374	2
3847B	Front spr'g clamp assem- bly with bolt and nut	1916-22	20	1 50	6 00.		10		2953	2
3848	Rear spr'g clamp assem- bly with bolt and nut	1909-17	20	1 50	6 00.		10		376	2
3848B	Rear spr'g clamp assem- bly with bolt and nut	1918-22	20	1 50	6 00.		10		378	2
REAR SPRING—60 INCH TREAD										
3850	Rear spring	1909-16	2				9 00	MH	1704	1
3851	Rear spring clip	1909-16	Order 3833B							
3852	Rear spring tie bolt	1909-16	2				10		1738	1
3852B	Rear spring tie bolt nut	1909-16	Order 3837B							
3853	First leaf (main leaf)	1909-16	2				1 80		1739	1
3854	Second leaf	1909-16	2				1 60		1740	1
3855	Third leaf	1909-16	2				1 40		1741	1
3856	Fourth leaf	1909-16	2				1 20		1742	1
3857	Fifth leaf	1909-16	2				1 00		1743	1
3858	Sixth leaf	1909-16	2				90		1744	1
3859	Seventh leaf	1909-16	2				75		1745	1
3860	Eighth leaf	1909-16	2				60		1746	1
STARTING CRANK										
3900	Starting crank only	1909-22	2				50		519B	1
3901	Starting crank handle	1909-22	5				20		520	1
3902	Starting crk handle bolt	1909-22	20	1 20	5 00.		10		521	1
3903	Starting crank sieve	1909-22	6		6 00.		10		523	1
3905	Starting crank ratchet pin	1909-22	20	50	2 00.		05		4491	1
3906	Starting crank ratchet	1909-22	6				20		528B	1
3908	Starting crank spring	1909-22	20	40	1 50.		05		626	1
3909	Starting crk handle spring	1915-22	20		1 50.		02		5911	1
3910	Starting crank assy	1909-22	2				50	MH	5931	1
RADIATOR—THERMO SYPHON										
3925	Radiator	1909-16	2				17 00	MH	1100C	1
3925B	Radiator	1917-22	2				17 00	MH	8700B	1
3925C	Radiator less shell	1917-22	2				15 75	MH	8736B	1
3926	Radiator cap	1909-22	10		12 00.		15	MH	8714	1
3928	Radiator pad	1909-19	10				05		1105	2
3929	Radiator stud	1909-19	10				05		1162A	2
3929B	Radiator stud	1919-22	20		4 00.		05		1162B	2

*Nine-leaf spring for Sedan.

Of the net amount at which parts marked "MH" are billed to purchasers who purchase direct from the Ford Motor Company, 20/21 represents the price of the goods and 1/21 represents excise tax.

Part No.	Name of Part	Year	Minimum Whole- sale Quan.	LIST PRICE			Each	Tax Status	Fac. No.	No. Req. per Car
				Lots of 20 per lot	Lots of 100 per lot	Lots of 1000 per lot				
RADIATOR—THERMO SYPHON—Continued										
3929C	Radiator stud nut	1909-22	20		\$2 00.		\$0 03.		1154	2
3930	Radiator stud spring	1909-22	Order 2742							
3931 1/2	Radiator stud washer nut	1909-22	20		2 00.		03		1161	2
3932	Radiator rod	1909-22	6				15	MH	1111B	1
3934	Radiator rod nut	1909-22	Order 3066B							
3939	Outlet connection pipe	1909-22	6				30		1121	1
3940	Outlet connection cock	1909-22	Order 3079							
3944	Outlet connection hose	1909-22	20	\$1 80	8 00.		10		507B	2
3945	Outlet con. hose clip	1909-22	20	80	3 50.		05		554B	4
3947B	Radiator shell	1917-22	4				1 25	MH	8737B	1
3975	Rad. stud spring upper thimble	1919-22	20				02		1115	1
3976	Rad. stud spring lower thimble	1919-22	20				03		1114	1
RADIATOR FAN										
3960	Fan and pulley assembly	1909-20	4				1 25	MH	619	1
3961	Fan blade	1909-20	6				10		611	4
3961B	Fan blade rivets	1909-20	1000		\$1 50 doz.		05		1566	16
3961C	Fan blade assembly	1920-22	4				25		620	1
3962B	Dr. fan pulley with bush	1920-22	4				70		618B	1
3963	Fan drive pulley	1909-20	6				25		602A	1
3963B	Fan drive pulley	1920-22	4				30		602B	1
3964	Fan belt—23" fabric	1909-16	6				30		609A	1
3964C	Fan belt—26" fabric	1917-20	12				30		609B	1
3964D	Fan belt—fabric	1920-22	12		30 00		40		609C1	1
3964E	Fan belt—rubber	1920-22	20		30 00.		40		609C2	1
3966	Fan shaft	1909-20	10				20		606A	1
3966B	Fan shaft	1920-22	10		15 00.		20		606B	1
3967	Fan bracket	1909-16	2				40		604A	1
3967B	Fan bracket	1917-22	4				30		604B	1
3968	Fan bracket bolt	1909-22	20		8 00.		10		605	1
3970	Fan grease cup	1909-22	12		8 00.		10		601	1
3973	Fan adjusting screw	1909-22	20	30	1 25.		02		645	1
3973B	Fan adjusting screw nut	1909-22	Order 3066B							
3974	Fan driven pulley bush	1917-20	4				15		8757A	1
3974B	Fan driven pulley bush	1920-22	6				15		8757B	2
3980	Fan pulley plug	1920-22	20		2 00.		03		633	1
3981	Fan pulley gasket	1920-22	20		1 50.		02		634	1
3982	Fan shaft cap	1920-22	20		1 00.		02		635	1
3983	Fan shaft felt washer	1920-22	20		1 00.		02		637	1
3984	Fan blade screw	1920-22	20		75.		01		652	4
3985	Fan blade screw washer	1920-22	Order 3261C							
3986	Fan shaft nut	1920-22	Order 2719							
MUFFLER										
4025	Muffler assembly	1909-20	4				2 00	MH	1200BR	1
4025B	Muffler assembly	1921-22	2				2 25	MH	1200C	1
4026B	Muffler head—front	1917-20	2				45		1202C	1
4026C	Muffler head—front	1921-22	2				15		1202D	1
4027	Muffler shell—outer	1909-22	6				25		1203	1
4028	Muffler shell—middle	1909-22	6				20		1204	1
4029	Muffler shell—inner	1909-20	6				15		1205	1
4030	Muffler rod	1909-17	6				10		1206A	3
4030B	Muffler rod	1917-20	6				10		1206B	1
4031	Muffler rod nut	1909-20	Order 2503F							
4032	Muffler head retainer	1921-22	10				02		1210	1
4033	Muffler head retainer bolt and nut	1921-22	Order 4819B and 3514							
4035	Muffler head bolt washer	1921-22	20				doz. 05		925	1
4037B	Long exhaust pipe	1909-20	3				1 05		1214A	1
4037C	Long exhaust pipe	1920-22	2				1 50	MH	1214B	1
4040B	Muffler head—rear	1917-21	2				45		1201D	1
4040C	Muffler head—rear	1921-22	2				20		1201E	1
4041	Muffler head to frame bolt and nut	1917-20	Order 3362 and 3066B							
4041B	Muffler head to frame bolt and nut	1921-22	Order 3074 and 2515							
HOOD										
4050	Hood	1909-16	4				7 50		1300	1
4050B	Hood	1917-22	4				6 00	MH	8726	1
4051	Hood handle	1909-22	6				05		1314	2
4052	Hood clip	1909-16	6				10		1310	4
4052B	Hood clip	1917-22	6				05		8731	4
4053	Hood clip spring	1909-16	20				02		1311	4
4053B	Hood clip spring	1917-22	20	30	1 25		02		8734	4
4056	Hood board—left	1909-16	6				25		1339	1
4056B	Hood block—left	1917-22	6				20		8742	1
4057	Hood board—right	1909-16	6				25		1340	1
4057B	Hood block—right	1917-22	6				20		8741	1
4060B	Hood support on dash	1915-16	6				1 50		7464	1
4060C	Hood pad (on dash)	1917-22	6		6 00		08	MH	8711	2
4060D	Hood pad (on rad. shell)	1917-22	6		12 00		15	MH	8710	1
4061B	Hood clasp (on dash)	1917-22	6		2 50		05		8720	1
4061C	Hood clasp (on dash) screw	1917-22	20				02		8763	2
4061D	Hood clasp (on dash)	1920-22	6		2 50		05		8720B	2

Part No.	Name of Part	Year	Minimum Whole- sale Quan.	LIST PRICE			Each	Tax Status	Fac. No.	No. Req. per Car
				Lots of 20 per lot	Lots of 100 per lot	Lots of 1000 per lot				
HOOD—Continued										
4073...	Hood bl support—front R.	1917-22	12				\$0 05		8743	1
4074...	Hood bl support—front L.	1917-22	12				05		8744	1
4075...	Hood bl support—rear R.	1917-22	12				05		8745	1
4076...	Hood bl support—rear L.	1917-22	12				05		8746	1

FORD CARBURETOR PARTS (MODEL "G")

4451A	Float with lever	1914-21	6				40		6333AR	1
4452A	Spray needle assembly	1914-21	6				20		6335AR	1
4453A	Gasoline inlet needle	1914-21	6				20		6324A	1
6041	Mix chamber	1914-20	4				2 50		6340AR	
6042	Mix chamber top	1912-14-20	4				40		4801R	
6043	Mix chamber top screw	1912-20	10				02		4808R	
6044	Mix chamber top gasket	1914-20	10				01		6317R	
6044B	Mix chamber bottom gasket	1912-20	10				03		6367AR	
6045	Mix chamber nut	1912-20	6				07		4810AR	
6046	Float chamber & bush	1914-20	4				50		6318AR	
6047	Float lever pin	1914-20	10				03		6320AR	
6048	Float valve seat	1914-20	6				10		6321AR	
6049	Float valve seat gasket	1914-19	10				01		6322A	
6051	Spray needle clamp nut	1912-20	6				05		4812AR	
6052	Spray nozzle	1914-20	6				30		6341AR	
6053	Spray nozzle gasket	1912-14-20	10				01		4820AR	
6055	Gas inlet elbow	1913-20	6				15		4859	
6057	Low speed tube with nut	1915-20	4				20		6360R	
6058	Low speed tube retaining screw	1912-14-20	6				03		4814R	
6060	Low speed boss screw	1912-14-20	10				03		4816R	
6061	Strangling tube	1912-14-20	6				15		4817R	
6062	Strangling tube retainer	1912-14-20	10				02		4818R	
6064	Throttle lever stop screw	1911-21	10				02		4520A	
6065	Throttle lever clamp screw	1911-19	10				02		4521AR	
6068	Throttle plate	1912-14-20	6				10		4517AR	
6070	Throttle lever	1912-14-20	6				20		4836B	
6070B	Throttle lever—over-size	1912-14-20	6				20		4836AR	
6071	Throttle lever adj lock nut	1911-20	10				02		4528R	
6074	Aux. throttle plate	1915-20	10				03		6337AR	
6076	Aux. throttle lever spring	1914-20	10				02		6342A	
4494	Aux. throttle lever spring	1910-14	6				05		6342BR	
6077	Aux. throttle lever assy.	1914-21	6				15		6327A	
4463	Float lever holding screw	1912-19	10				02		4805AR	
4464	Float lever holding screw	1913-19	10				03		4853AR	

6081A. Drain valve plug assy. Order T-6216
Parts for 1909-13 Carburetors supplied by Holley Kerosene Carburetor Co., Detroit, Mich.

KINGSTON CARBURETOR PARTS (MODEL "L-2")

6101A	Carburetor float assb.	1917-21	6				75		6333FR	1
6101	Float with lever	1915-16	6				60		6333ER	1
6102	Throttle lever	1913-20	6				30		4836CR	
6103A	Constant air supply lever	1913-20	6				30		6327CR	
6104	Gas valve cap	1910-16	6				15		3005	
6105A	Air valve cap	1915-16	6				30		6357AR	
6105B	Air valve cap	1917-20	6				30		6357BR	
6106	Float chamber	1915-16	2				2 25		4802CR	
6106A	Float chamber	1917-20	4				1 00		4802DR	
6107	Mix chamber	1915-16	2				2 75		6340ER	
6107A	Mix chamber	1917-20	2				2 50		6340FR	
6108	Mix chamber gasket	1913-16	6				15		6367CR	
6108A	Mix chamber gasket	1917-20	10				03		6367DR	
6109	Throttle gate	Use 6068								
6110	Constant air supply gate	1913-14	6				05		6337BR	
6110A	Constant air supply gate	1915-20	6				10		6337CR	
6111	Mix chamber nut	1913-20	6				10		4810BR	
6114	Gas valve retainer nut	1910-16	6				10		3027	
6115	Spray needle assembly	1910-21	6				40		6335D	1
6118	Float to lever and throttle gate screw	1910-16	10				02		3014	
6118A	Float to lever screw	1917-20	10				03		4853B	
6120	Throttle lever adj. screw	1913-20	10				03		4520B	
6121	Throttle lever clamp screw	1910-20	10				03		4521BR	
6122	Gas valve operating lever shaft	1913-16	6				15		6320DR	
6123	Air valve shaft	1915-20	6				20		6381AR	
6124A	Spray needle sleeve	Order 6165								
6125	Constant air supply spring	1913-20	10				03		6342C	
6126	Float valve seat	1915-16	6				15		6321CR	
6126A	Float valve seat	1917-20	6				20		6321DR	
6127	Gas valve	1910-16	6				30		6324BR	
6127A	Gasoline valve	1917-21	6				35		6324CR	1
6128	Air valve	1915-20	6				30		6355AR	
6129	Float valve seat gasket	1915-16	10				03		6322DR	
6129A	Float valve seat gasket	1917-20	10				03		6322ER	

Parts for 1909-16 Carburetors supplied by Bryne Kingston Co., Kokomo, Ind.

Of the net amount at which parts marked "MH" are billed to purchasers who purchase direct from the Ford Motor Company, 20/21 represents the price of the goods and 1/21 represents excise tax.

Part No.	Name of Part	Year	Minimum Whole- sale Quan.	LIST PRICE			Each	Tax Status	Fac. No.	No. Req. per Car
				Lots of 20 per lot	Lots of 100 per lot	Lots of 1000 per lot				
KINGSTON CARBURETOR (MODEL "L-4")										
6150.	Carburetor	1921-22	4				\$ 5 00.		553A1	1
6151.	Drain valve body	1921-22	6				15		6328C.	
6152.	Float chamber	1921-22	4				50		4802E.	
6153.	Mixing chamber	1921-22	4				2 50		6340G.	
6154.	Carb. inlet elbow		Order 6055							
6155.	Float with lever	1921-22	6				50.		6333G	1
6156.	Float chamber gasket	1921-22	6				05		555D.	
6157.	Mix. chamber gasket	1921-22	10				03		6367E.	
6158.	Float valve seat gasket	1921-22	10				03.		6322F.	
6159.	Constant air supply lever assy.	1921-22	6				30		6327D.	
6160.	Throttle lever assy.	1921-22	6				30.		4836D.	
6161.	Spray needle assembly	1921-22	Order 6115							
6162.	Drain valve body clamp nut	1921-22	6				05		6395	
6163.	Mix. chamber nut	1921-22	6				10		4810C.	
6164.	Constant air supply spring		Order 6125							
6165.	Spray needle sleeve	1915-21	6				20		4812C.	
6166.	Float lever pin	1915-21	10				02		6320C.	
6167.	Constant air supply plate	1921-22	Order 6068							
6168.	Throttle plate	1921-22	Order 6209							
6169.	Drain valve plug assy.	1915-21	6				10		6329B.	
6170.	Throttle lever adj. screw		Order 6120							
6171.	Air valve stop assy.	1921-22	6				10		6397	
6172.	Float valve seat	1921-22	6				20		6321E.	
6173.	Air valve shaft assy.	1921-22	6				20		6381B.	
6174.	Air valve	1921-22	6				30		6355B.	
6175.	Gasoline valve	1921-22	6				35		6324D.	

FORD CARBURETOR (MODEL "NH")

6200B	Carburetor	1920-22	4				5 00		MH. 553A4	
6201	Float with lever	1920-22	6				40		6333B	1
6202B	Float chamber and bushing assy.	1920-22	6				50		6318B	
6203	Float chamber gasket	1920-22	10				03		555B	
6204	Spray nozzle gasket	1920-22	10				01		4820B	
6205	Mixer chamber gasket	1920-22	10				03		6367B	
6206	Throttle lever	Order 6070								
6206B	Aux. throttle lever	Order 6077								
6207B	Mixer chamber	1920-22	4				2 50		6343R	
6208	Adj. needle clamp nut	1920-22	6				05		4812B	
6209	Throttle plate	1920-22	6				05		4517B	
6210	Float lever pin	1920-22	10				01		6320B	
6211	Float chamber screw	1920-22	6				10		6284	
6212	Float valve seat	1920-22	6				10		6321B	
6213	Spray needle assembly	1920-22	6				20		6335B	1
6214B	Spray nozzle	1920-22	6				25		6341C	
6215	Air passage vent plug	1920-22	6				05		6273R	
6216	Drain valve plug assy	1916-22	6				10		6329	
6217	Throttle lever stop screw	Order 6064								
6218	Aux. throttle lever spring	Order 6076								
6219	Float valve seat gasket	1920-22	10				01		6322C	
6220	Gasoline inlet needle	Order 4453A								

CARBURETOR ATTACHMENTS

4127A	Carburetor adj rod brkt	1909-22	6				05		1357	1
4129A	Carb. adjusting rod	1909-22	6				15		7920	1
4130	Carb. flange bolt	1909-22	6							
4130B	Carb. flange bolt nut	1909-22	6							
4134	Carb. flange gasket	1909-22	20		\$0 50	\$2 00	05		MH. 1380B	1
4431	Carb. priming rod	1909-22	12				05		2000	1
4582	Carb. hot air pipe	1912-22	6				20		686	1
4583	Priming bell crank	1919-22	6				10		7691	1
4585	Priming rod plate—Coupe	1919-20	6				10		7664	1
4586	Priming rod plate—Sedan	1919-20	6				10		7665	1
4587B	Priming rod—Sedan	1919-22	6				15		6628	1
4588B	Priming rod (Cp., T. C. and Rbt.)	1919-22	6				15		6627	1
*4588C	Priming rod (Cp., T. C. and Rbt.)	1922	4				15		6630	1
4589	Priming rod	1919-22	6				05		8797B	1
4589B	Priming rod	1922	6				05		8797A	1

Part No.	Name of Part	Year	LIST PRICE				Each	Tax Status	Fac. No.	No. Req. per Car
			Minimum Whole-sale Quan.	Lots of 20 per lot	Lots of 100 per lot	Lots of 1000 per lot				
FENDERS—56 INCH TREAD—Continued										
4804F...	Rear fender iron—left— Cp. & Rbt.	1913-22	2				\$0 50		5390	1
4804G...	Rear fender iron—R. or L.—Sedan	1916-17	2				25		8154A	2
4804K...	Fender iron—R. or L.— Sedan	1918-22	2				15		8154B	2
4804L...	Rear fender iron—T. C.	1921-22	2				10		7395	2
4805B...	Rear fender iron bolt	1915-22	20	\$0 35	\$1 50		03		7171	6
4805C...	Rear fender iron bolt nut.	1915-22	100		1 00	\$ 6 00	02		341	
4806B...	Fender eye bolt	1909-22	20				05		1942	4
4806C...	Fender eye bolt washer	1909-22	20				01		1943	4
4806D...	Fender eye bolt nut.	1909-22	Order 2825B							
4808...	Front fender iron bolt (side)	1910-22	20		2 50	15 00	03		1323	2
4808B...	Front fender iron bolt (bottom)	1910-22	20		2 50	15 00	03		347	2
4808D...	Front fender iron bolt nut	1910-22	Order 2515							
4808C...	Front fender apron to frame bolt.	1915-22	20	30	1 25	8 00	03		4088	4
4808E...	Front fender apron to frame bolt nut.	1915-22	Order 3088E							
4809...	Front fender iron—R or L	1909-22	2				60		343	2
4850...	Frt. fender apron brkt.—R	1917-22	2				05		8854	1
4851...	Frt. fender apron brkt.—L	1917-22	2				05		8855	1
4852...	Front fender iron brkt.—R	1915-22	2				15		7984	1
4853...	Front fender iron brkt.—L	1915-22	2				15		7998	1
4854...	Rear fender iron bracket	1915-22	2				15		7483	2
4855...	Rear fdr to R.B. shield bkt	1915-22	4				05		7994	2
RUNNING BOARDS AND SHIELDS—56 INCH TREAD										
4812...	Running board—R.	1909-22	4				1 50	MH.	5418	1
4813...	Running board—L.	1909-22	4				1 50	MH.	5480	1
4814C...	R. B. shield—R.	1917-22	4				2 40	MH.	7986	1
*4814D...	R. B. shield—R.	1922	2				2 40	MH.	7747	1
4815C...	R. B. shield—L.	1917-22	4				2 40	MH.	7987	1
*4815D...	R. B. shield—L.	1922	2				2 40	MH.	7748	1
4816...	R. B. truss rod—front with nuts	1909-21	4				40	MH.	5804	1
4817...	R. B. truss rod—rear with nuts	1909-21	4				40	MH.	5805	1
4817B...	Truss rod nut	1909-21	100		2 00		03		339	4
4818...	R. B. bracket	1909-22	4				80		336	4
4818B...	R. B. bracket assy.	1909-22	4				1 10		2926	2
4819...	R. B. to rear fender bolt.	1909-20	20	30	1 25		03		1344B	4
4819B...	R. B. to rear fender bolt.	1921-22	20	35	1 50		03		8161	4
4819C...	R. B. to rear fender nut.	1909-22	Order 3088E							
4819D...	R. B. to rear fender nut.	1909-22	Order 3514							
4820...	R. B. to front fender bolt and nut.	1909-20	Order 4808C and 3088E							
4820C...	R. B. to front fender bolt	1921-22	Order 4805B							
4821...	R. B. to shield clamp	1918-22	6				05		5478	
RUNNING BOARD—TRUCK										
4830...	Running board—R. or L.	1918-22	2				50	MH.	TT5418	2
4831...	R. B. bracket	1918-22	2				35		TT2926	4
4832...	R. B. bracket brace	1918-22	2				15		TT2927	2
4833...	R. B. bracket rear brace	1918-22	2				30		TT2929	1
4834...	R. B. bracket—rear	1918-22	2				35		TT2925	
4835...	R. B. bracket and brace assy.—frt.	1918-22	2				50		TT2928	
4836...	R. B. bracket and brace assy.—rear	1918-22	2				1 10		TT2930	
FORD SPARK COIL										
5000...	Coil (includes switch)	1909-22	2				9 50	MH.	1383	1
5001...	Coil (less switch)	1909-22	2				8 75		1383B	1
5002...	Coil box with cover	1914-22	2				2 50	MH.	5858	1
5003...	Coil box with cover	1919-22	2				1 75	MH.	5858B	1
5004...	Coil box cover	1915-22	2				30		7910	1
5005B...	Switch cover	1918-22	4				10		5835B	1
5006...	Switch plug	1914-22	20	50	2 00		05		5815	1
5007...	Coil unit	1914-22	6	30 00			1 75	MH.	5845	4
5008...	Vibrator	1914-22	20	1 30	6 00	45 00	10		6797	4
5009...	Vibrator bridge	1914-22	20	1 80	8 00	60 00	10		6702	4

*For FORD-door Sedan.

Of the net amount at which parts marked "MH" are billed to purchasers who purchase direct from the Ford Motor Company, 20/21 represents the price of the goods and 1/21 represents excise tax.

Part No.	Name of Part	Year	LIST PRICE				Each	Tax Status	Fac. No.	No. Req. per Car
			Minimum Whole-sale Quan.	Lots of 20 per lot	Lots of 100 per lot	Lots of 1000 per lot				
SWITCH—Continued										
5014C...	Starting switch brkt assy.	1922	4				\$0 30		8696	
5014E...	Starting switch cover and plunger assy.	1922	2				35		8698	
5015...	Extension (starting switch plunger)	1919-22	6				10		8793	1
AMMETER										
5016...	Ammeter	1919-22	6				90		7680	1
5017...	Ammeter lens & rim	1919-22	6				20		8105	1
5017B...	Ammeter lens	1919-22	6				05		8121	1
BENDIX DRIVE										
5018...	Bendix	1919-22	4				5 00		1883	1
5019...	Head (Bendix)	1919-22	4				50		2007	1
5020...	Key (Bendix)	1919-22	20		\$1 50		02		1751	1
5021...	Shaft & gear (Bendix)	1919-22	6				4 50		2026	1
5022...	Spring (Bendix)	1919-22	6				50		2006	1
5023...	Screw (Bendix shaft spring)	1919-22	20		7 50		10		1983	1
5024...	Screw (Bendix head spring)	1919-22	100		2 00		05		1781	1
5025...	Washer (Bendix spring screw lock)	1919-22	20				03		1782	2
WIRING										
5026...	Spark plug wire 14 3/8"	1909-22	20	\$1 70	7 50		10	MH.	1365	1
5027...	Spark plug wire (also magneto to coil) 10 1/2"	1909-22	20	1 60	7 00		10	MH.	1366	1
5028...	Spark plug wire, 7"	1909-22	20	1 40	6 00		10	MH.	1376	2
5030...	Commutator wire	1909-22	10				70	MH.	7502	1
*5030B...	Commutator wire	1922	10				1 00	MH.	7502C	1
5031...	Com. wire (starter type)	1919-22	10				03	MH.	7502B	1
5033...	Com. wire loom support	1909-22	10				01		1390	2
5033B...	Com. wire term. retainer	1921-22	10				02		2124	2
5033C...	Wire on dash clip	1919-22	20						7688	7
5034...	Wire (ammeter to cut-out) Sedan 33"	1919	6				15	MH.	7683A	1
5035...	Wire (ammeter to cut-out) Sedan 49"	1919-22	6				20	MH.	7683B	1
5036...	Wire (ammeter to cut-out) Coupe 23"	1919	6				15	MH.	7684A	1
5037...	Wire (ammeter to cut-out) Coupe 41"	1919-22	6				20	MH.	7684B	1
5038...	Wire (ammeter to ignition switch)	1919-22	6				10	MH.	7681	1
5039...	Wire (gen. to cut-out)	1919	6				15	MH.	7687	1
5040...	Wire (terminal block to switch)	1919-22	6				05	MH.	8894B	1
5041...	Wire (lighting)	1919-22	6				90	MH.	7682B	1
5041B...	Lighting wire—truck	1921-22	2				1 00	MH.	TT7682	1
*5041C...	Lighting wire	1922	6				55	MH.	7661	1
5042...	Wire (switch) Sedan	1919-22	6				70	MH.	7685B	1
5043...	Wire (switch)	1919-22	6				70	MH.	7686B	1
*5043B...	Switch wire	1922	6				50	MH.	7660	1
5044...	Block (terminal)	1919-22	6				05		1950	1
5045...	Screw (terminal block to dash)	1919-22	12				01		2073	2
5046...	Cable (battery to switch)—28 1/2"	1919-22	4				80	MH.	1889B	1
5046C...	Battery to switch cable—truck	1921-22	2				80	MH.	TT1889	1
5047...	Cable (battery to switch)—34"	1920	4				85	MH.	1889C	1
5047B...	Battery to switch cable support—truck	1920-22	2				10		2116	1
5047C...	Battery to switch cable support	1920-22	2				10		2112	1
5047D...	Battery to switch cable support bush	1920-22	2				05		2113	1
5047E...	Battery to switch cable sleeve	1921-22	2				05		2120	1
5048...	Cable (ground) 20"	1919	4				70	MH.	1890A	1
5049...	Cable (ground) 9 1/2"	1919-22	4				50	MH.	1890B	1
5050...	Cable (ground) 11 1/2"	1920	4				60	MH.	1890C	1
5051...	Cable (switch to motor)	1919-22	4				60	MH.	1891	1
5051B...	Switch to motor cable sleeve	1921-22	2				30		2119	1
5052...	Bolt (battery cable terminal)	1919-22	10				04		1937	2
5052B...	Nut (battery cable terminal bolt)	1919-22	10				03		1938	2
CUT-OUTS										
5054...	Cut-out (electric)—on dash	1919	2				1 10	MH.	7677AR	1
5055...	Cut-out (electric)	1919-22	12				1 00	MH.	7677B	1

*Used on cars without starter, with switch on instrument panel.

Of the net amount at which parts marked "MH" are billed to purchasers who purchase direct from the Ford Motor Company, 20/21 represents the price of the goods and 1/21 represents excise tax.

Part No.	Name of Part	Year	Minimum Whole- sale Quan.	LIST PRICE			Tax Status	Fac. No.	No. Req. per Car
				Lots of 20 per lot	Lots of 100 per lot	Lots of 1000 per lot			
STARTER PARTS									
5056	Gasket (motor mount'g)	1919-22	20	\$0 35	\$1 50	\$ 0 02		1768	
5057	Gasket (gen. head)	1919-22	20	25	1 00	02		1774	
5058	Screw (gen. m't'g short)	1919-22	24		1 50	03		1755	
5059	Screw (Bendix cover)	1919-22	24		75	01		1765	
5060	Screw (term. blk. to wire)	1919-22	24		50	01		2015	
5061	Screw (ammeter to plate)	1919-22	24		50	01		5819	
5062	Screw (motor mounting)	1919-22	100		1 00	02		5510	

STARTING MOTOR AND PARTS

5099	Motor (starting)	1919-22	2			15 00	MH.	1877	
5100	Armature	1919-22	2			5 00		1940	
5101	Band (cover)	1919-22	4			10		1801C	
5102	Bracket (brush end)	1919-22	6			30		1868	
5103	Bracket assy. mounting	1919-22	4			1 30		2037	
5104	Brush	1919-22	12			30		1806	
5105	Bushing (shaft, rear)	1919-22	6			30		1759	
5106	Bushing (shaft, front)	1919-22	6			10		1789	
5107	Coil assembly (field)	1919-22	2			2 00		1871	
5108	Holder assem. (brush)	1919-22	6			60		1864B	
5109	Insulator (terminal, outer)	1919-22	20	50	2 00	03		1795	
5110	Insulator (terminal, inner)	1919-22	20	25	1 00	02		1794	
5112	Nut (terminal)	1919-22	20	40	1 75	03		1791	
5113	Screw (field)	1919-22	24		1 00	02		1788	
5114	Screw (brush end bracket to yoke)	1919-22	24			doz. 05		1808	
5115	Spring (brush tension)	1919-22	20	70	3 00	05		1809	
5116	Washer (terminal)	1919-22	24			01		1792	
5117	Washer (terminal, inner, steel)	1919-22	24			02		1798	
5118	Yoke (motor) assembly	1919-22	2			3 50		1852	

GENERATOR AND PARTS

5119	Generator	1919-22	2			15 00	MH.	1879	
5120	Armature (less bearings)	1919-22	6			5 00		1925	
5121	Bearing (small)	1919-22	6			1 20		1838	
5122	Bearing (large)	1919-22	6			1 45		1841	
5123	Bolt (terminal)	1919-22	24		2 00	03		1836	
5124	Bracket (brush end)	1919-22	6			30		1894	
5125	Brush (large)	1919-22	24		16 00	20		1844	
5126	Brush (small)	1919-22	24		15 00	20		1845	
5127	Disc (large bearing)	1919-22	12			03		1847	
5128	Felt (small bearing)	1919-22	12		1 00	02		2033	
5130	Head	1919-22	4			50		2044	
5131B	Holder (small brush)	1919-22	12		12 00	15		1821	
5132B	Ring (brush holder)	1919-22	12			05		1996	
5132C	Holder assem. (brush)	1919-22	6			60		1865	
5132D	Holder assem. (brush) less small brush holder	1919-22	6			45		1920	
5133	Insulator (terminal, outer)	1919-22	20	50	2 00	03		1827	
5134	Nut (terminal)	1919-22	24		1 50	03		1818	
5134B	Nut (brush holder stud)	1919-22	24			01		6754	
5135	Oil	1919-22	20	1 70	7 50	10		1837	
5136	Pin (pinion to shaft)	1919-22	24			doz. 05		1750	
5137	Pinion	1919-22	6			40		1752	
5138	Retainer (small brg. felt)	1919-22	24		1 50	02		1832	
5139	Spring (large brush)	1919-22	20	70	3 00	05		1967	
5140	Spring (small brush)	1919-22	20	70	3 00	05		1988	
5141	Stud (small brush holder)	1919-22	20			05		1823B	
5141B	Stud (small brush holder)	1919-22	20	25	1 00	02		1823C	
5142	Washer (terminal)	1919-22	100		1 00	02		1831	
5142B	Washer (small brush holder stud)	1919-22	24			doz. 05		2058	
5143	Winding assembly (field)	1919-22	2			1 50		1978	
5144	Wire (brush to terminal)	1919-22	6			06		1851	
5145	Yoke (gen.) assembly	1919-22	1			3 00		1887	

BATTERY BRACKET AND PARTS

5150	Bracket assembly	1919-22	2			90		8841	
5151	Bolt (clamp)	1919-22	24			03		8846	
5151B	Nut (clamp bolt)	1919-22	24			05		8844	
5152	Clamp	1919-22	6			05		8844B	2
5152B	Battery clamp—truck	1921-22	6			10		TT8816	1
5153B	Battery support angle—truck	1921-22	2			20		TT8817	2
5154	Battery box support—truck	1921-22	6			10		TT8818	1
5155	Battery clamp support—R—truck	1921-22	2			10		TT8819	1
5156	Battery clamp support—L—truck	1921-22	2			75		7671	1
5158	Battery box—less cover	1921-22	2			75		5491	1
5159	Battery box cover assy.	1921-22	2			15		5493	1
5160	Battery box cover door	1921-22	2						

†Also for generator.

†Armature may be exchanged with dealer at \$4.00

Of the net amount at which parts marked "MH" are billed to purchasers who purchase direct from the Ford Motor Company, 20/21 represents the price of the goods and 1/21 represents excise tax.

Part No.	Name of Part	Year	LIST PRICE					Tax Status	Fac. No.	No. Req. per Car
			Minimum Whole-sale Quan.	Lots of 20 per lot	Lots of 100 per lot	Lots of 1000 per lot	Each			
BATTERY (FORD)										
5175	Battery	1919-22	4				\$20 00	MH.	7670	1
5176	Battery case assy.	1919-22	2				1 25		5434	
5177	Cell connector	1919-22	6				15		5435	
5178	Cell cover	1919-22	6				45		5436AR	
5178B	Cell cover	1921-21	6				45		5436B	
5179	Terminal post gasket	1919-22	20				01		5437AR	
5179B	Terminal post gasket	1921-22	20				01		5437B	
5180	Rubber jar	1919-22	6				1 25		5438	
5181	Terminal post nut	1919-22	20				04		5439AR	
5181B	Terminal post nut	1921-22	20				04		5439B	
5182	Negative group assy.	1919-22	6				2 25		5440AR	
5182B	Negative group assy.	1921-22	6				2 25		5440B	
5183	Positive group assy.	1919-22	6				2 25		5441AR	
5183B	Positive group assy.	1921-22	6				2 25		5441B	
5184	Filler plug with gasket	1919-22	10				15		5444AR	
5184B	Filler plug with gasket	1921-22	10				15		5444B	
5185	Plate separator	1919-22	100		\$4 00	\$35 00	05		5445	
5186	Positive plate	1919-22	20				30		5427AR	
5186B	Positive plate	1921-22	20				30		5427B	
5187	Negative plate	1919-22	20				30		5428AR	
5187B	Negative plate	1921-22	20				30		5428B	
5188	Negative terminal post	1919-22	10				25		5425AR	
5188B	Negative terminal post	1921-22	10				25		5425B	
5189	Positive terminal post	1919-22	10				25		5426 AR	
5189B	Positive terminal post	1921-22	10				25		5426B	

SPARK PLUGS

5200	Spark plug (Bethlehem)	1909-22	20			60		1386A2	4
5201	Spark plug "Ford" (Champion)	1909-22	20	9.00 net	40.00 net	60		1386A3	4
5202	Spark plug porcelain (Bethlehem)	1909-22	20			35		3761	4
5203	Spark plug porcelain (Champion X)	1909-22	20	4.46 net	20.00 net	30		3760A	4
5203B	Spark plug porcelain "Ford" (Champion)	1909-22	20	4.49 net	20.00 net	30		3760C	4

REPAIR TOOLS

Part No.	Name of Part	Year	Minimum Whole- sale Quan.	LIST PRICE			Tax Status	Fac. No.	No. Req. per Car
				Lots of 20 per lot	Lots of 100 per lot	Lots of 1000 per lot			
1349	Hub cap wrench		6			\$0 15		1349	
1387	Adjustable wrench		6			40		1387	
1903	Pliers		6			25		1903	
1917	Double end wrench		6			20		1917	
2335	Spark plug and cyl. head bolt wrench		6			50		5893	
2336	Tool roll		6			30		1979	
2337	Oil can		6			25		1384	
2338	Tire pump		6			1 50	MH.	1368	
2340	Tire irons, each		6			15		4069	
2343	Jack		6			1 50		3389	
TT4069	Tire iron (large)—Old No. 5Z-322		6			45			
3Z-698	Cyl. water outlet con. screw brace wrench.		6			40			
	Brake shoe support bolt brace wrench.		6						
	D/S bearing housing screw brace wrench		6						
3Z-775	3/8" socket wrench		4			30			
5Z-152	Rear axle housing bolt nut wrench.		6			40			
5Z-153	Socket wrench for crank shaft bear. bolt nut		6			60			
5Z-154	Body bracket con. bolt R. & L. wrench		6			30			
5Z-155	3/8" L socket wrench		6			45			
5Z-156	Crank shaft bearing bolt wrench.		6			50			
5Z-157	Con. rod cap bolt nut L wrench (Cyl. No. 4)		6			40			
5Z-158	D/S housing stud nut wrench for 1 1/2" nut		6			50			
5Z-159	Connecting rod T wrench.		6			75			
5Z-160	3/8" T socket wrench		6			55			
5Z-161	Body bracket connecting bolt T wrench, front and center		6			55			
5Z-162	Large cam gear lock nut wrench		6			20			
5Z-163	Generator third brush adjusting wrench		6			65			
5Z-165	Drive shaft pinion T wrench		6			25			
5Z-193	Spindle cone adjusting open end wrench		6			25			
5Z-195	3/8" open end wrench		6			30			
5Z-196	Rear axle entering wrench		6			1 00			
5Z-204	Exhaust pack nut open end wrench		6			65			
5Z-206	Rear axle nut open end wrench		6			45			
5Z-209	Connecting rod clamp screw wrench		6			75			
5Z-210	Fly wheel cap screw wrench		6			25			
5Z-212	Body bracket connecting bolt holding open end wrench		6			30			
5Z-232	Spindle arm bushing driver		6			20			
5Z-249	Generator third brush adj. wrench—new style		6			75			
5Z-280	Valve grinder		6						

Of the net amount at which parts marked "MH" are billed to purchasers who purchase direct from the Ford Motor Company, 20/21 represents the price of the goods and 1/21 represents excise tax.

Part No.	Name of Part	Minimum	List	Tax	Fac.
		Whole- sale Quan.	Price Each	Status	
REPAIR TOOLS—Continued					
5Z-285	1/4" hex. brace wrench	6	\$ 0 75		
5Z-286	Rear axle nut and housing plug brace wrench	6	80		
5Z-287	Rear wheel puller assembly	4	1 00		
5Z-289	1/4" brace socket wrench	6	75		
5Z-290	Piston ring squeezer	6	30		
5Z-314	Transmission clutch disc drum puller	3	75		
5Z-319	Valve spring lifter	6	30		
5Z-323	Bendix shaft head puller	2	1 00		
5Z-324	Trans. band ratchet wrench	6	50		
5Z-325	Con. rod cap bolt nut brace wrench with universal joint for No. 4 connecting rod	2	2 50		
5Z-326	Small time gear and trans. driven gear puller	2	1 50		
5Z-361	Large time gear puller	2	9 00		
5Z-362	Cam gear puller (3-spoke design)	2	6 50		
5Z-457	Valve seat reamer—Old No. 20Z-340	2	2 50		
20Z-340-1	Valve seat reamer cutter	2	1 50		
21Z-356	Valve seat reamer handle	2	1 00		

REPAIR TOOLS—TRUCK

5Z-288	Rear wheel puller assembly	2		1 20			
3389X	Jack	2		2 50			

COTTER PINS

COTTER PINS		Fac. No.			Fac. No.
1/4" x 1" cotter pins	421	1/4" x 3/8" cotter pins	66		
1/4" x 3/4" cotter pins	753	1/4" x 1/2" cotter pins	544		
1/4" x 1" cotter pins	82	1/4" x 5/8" cotter pins	88		
Price, per dozen			05		
Price, per gross			25		
Price, per thousand			75		

Part No.	Name of Part	Year	LIST PRICE				Tax Status
			Minimum Whole-sale Quan.	Price Each	Lots of 20 per lot	Lots of 100 per lot	

ELECTRIC HORN

6432BRX	Electric horn complete	2		\$2 50			
6432CX	Electric horn complete—battery type	2		50			
7915X	Electric horn terminal wire 9"	6		05			MH
7917BX	Electric horn to switch wire 35 1/2"	6		15			MH
8028X	Horn switch assembly	6		30			MH

ELECTRIC HEADLAMPS (STANDARD 1915-22)

6511CX	Headlamp—two bulb type	2 pr.		5 00			
6511HX	Headlamp assembly	2 pr.		6 00			
6511KX	Headlamp assembly	2 pr.		6 00			
6594AX	Door assembly—used with 6511DX	6		60			
6595HX	Door assy. with refracting lens	6		70			
6589X	Switch assembly—w/ screws	6		35			MH
8650X	Headlamp and horn switch assembly	6		40			MH
8892ARX	Dimmer resistance coil with wires	2		60			MH
*8892BX	Dimmer assembly	2		50			MH
*8890X	Dimmer cover	2		10			
6572AX	Headlamp bulb—9 volt—18 c.p.—double contact—used with magneto without dimmer	1915-18	20		40		
6572BX	Headlamp bulb—6-8 volt—16 c.p.—double contact—used with dimmer T8892X without starter or with dimmer T7320X with starter and T6576X or T6576BX lens	1918-20	20		40		
6572CX	Headlamp bulb—6-8 volt—16 c.p.—single contact—used with storage battery and T6576X or T6576BX lens	1918-20	20		40		
6572EX	Headlamp bulb—6-8 volt—bright, 18 c.p., dim, 2 1/2 c.p.—double contact—double filament—clear—used with T6576BX lens	1921	20		45		
6572HX	Headlamp bulb—6-8 volt—bright, 21 c.p., dim, 2 1/2 c.p.—double contact—double filament—used with T6576HX lens	1922	20		45		
6572KX	Headlamp bulb—6-8 volt—21 c.p.—double contact—used with dimmer T8892X without starter or dimmer T7320X with starter and T6576HX lens	1922	20		40		
6578X	Door lens gasket	10		05			
6576X	Door lens—8 1/4"	10		20			
6576BX	Door lens—8 1/4"—with green visor	20		30			
6576HX	Headlamp lens—refracting—in carton	10 pr.		60			

*Used on cars without starter with switch on instrument panel.

Of the net amount at which parts marked "MH" are billed to purchasers who purchase direct from the Ford Motor Company, 20/21 represents the price of the goods and 1/21 represents excise tax.

Part No.	Name of Part	Year	LIST PRICE				Tax Status
			Minimum	Lots		Each	
			Whole-sale	of 20	of 100		
			Quan.	per lot	per lot		
ELECTRIC HEADLAMPS (STANDARD 1915-22)—Continued							
6592X	Plug—with thimble		10		\$10 00	\$0 15	
6585AX	Reflector		6			75	
6585BX	Reflector (dimmer type)		6			90	
6580X	Focusing screw		10			03	
6591X	Focusing screw spring		10			02	
6574X	Bulb socket		10			15	
6574BX	Head lamp plug socket		10			15	
6586X	Reflector spring		10			05	
7487X	Switch to terminal wire—11½" long		10			05	MH
7489X	Lamp to lamp wire—40" long		10			10	MH
7490X	Lamp to ground wire—10¾" long		10			05	MH
2122X	Head lamp wire bushing		10			03	
4082X	Head lamp and tail lamp wire bushing		10			01	

SIDE OIL AND TAIL LAMPS—1915-22

6561X	Side oil lamp, per pair	2 pr.		4 50			
6568X	Tail lamp	2		2 50			
7669X	Electric tail lamp assembly	4		\$17 00			1 00
6484AX	Tail lamp red lens	1915-22	10		15		
6484BX	Electric tail lamp red lens	10		10 00			15
6520X	Bulb (tail lamp and headlamp dimmer) 6-8 volt—2 1/4 c.p.—single contact	1919-22	20		22 00		25
6495X	Electric tail lamp bulb socket	6		20			
2107X	Tail lamp wire clip	10		01			
2108X	Tail lamp wire spring	10		03			
6409X	Tail lamp wire bushing assy.	10		03			
6410X	Tail lamp wire bushing support	10		01			
T78821X	Tail lamp to ground wire assy.	6		15			MH
6599X	Side oil and tail lamp fount.	2		50			
6956X	Side oil lamp door	2		50			
6957X	Tail lamp door	2		50			
6966X	Tail lamp white lens and frame	2		20			
6460X	Lamp burner	2		25			
6483X	Side oil lamp door lens	2		15			
6392X	Lamp wick	6		05			

TOURING CAR AND TORPEDO WINDSHIELDS—1915-22

7840ARX	Windshield assembly, less brackets, bolts, nuts and washers	2		13 50			MH
7827ARX	W/S glass—upper	1915-22	4				
7828X	W/S glass—lower	1915-22	4				
7818BX	W/S hinge assy.—right	1917-22	2		30		
7819BX	W/S hinge assy.—left	1917-22	2		30		
7820AX	W/S upper frame assembly	1915-16	2		1 50		
7820BX	W/S frame assy.—upper	1917-22	2		1 50		
7822AX	W/S upper half assy.	1915-16	2		6 50		MH
7822BX	W/S upper half assy.	1917-22	2		6 50		MH
7823ARX	W/S lower half assy.	1915-22	2		7 00		MH
7802ARX	W/S lower frame only	1915-22	2		1 00		
7803ARX	W/S lower frame filler block	1915-22	2		15		
7839X	W/S frame filler block	1915-16	2		15		
7888ARX	W/S block (frame filler)—upper	1917-22	2		15		
7810X	W/S hinge bolt	1915-16	10		03		
7845ARX	W/S bracket—right	1915-22	2		50		
7845BX	W/S bracket—right	1919-22	2		50		
7846ARX	W/S bracket—left	1915-22	2		50		
7846BX	W/S bracket—left	1919-22	2		50		
7824ARX	W/S glass clamp	1915-22	6		02		
7801X	W/S frame—upper	1915-16	2		75		
7887X	W/S frame—upper	1917-22	2		75		
3827X	W/S top snap loop	1915-22	2		05		
1154X	W/S hinge bolt nut	1915-22	Order 3929C				
2449BX	W/S glass clamp screw	1915-22	10		01		
2257BX	W/S hinge to frame screw	1915-22	10		02		
292X	W/S hinge spring	1915-22	Order 2742				
7851ARX	W/S upper glass stop—nickel	1915-22	6		25		
7852ARX	W/S lower glass stop—nickel	1915-22	6		25		
7808X	W/S hinge thimble	1915-22	6		03		

TOURING CAR AND ROADSTER WINDSHIELDS—1922

7836X	Anti-rattler (windshield)	1922	4		15		
6645X	Bolt (W/S bracket to instrument panel)	1922	12		03		
7837X	Bracket (windshield) assy.—R. H.	1922	2		1 50		
7838X	Bracket (windshield) assy.—L. H.	1922	2		1 50		
*7891X	Bracket (side oil lamp)	1922	4		35		
9066X	Channel (windshield) center	1922	4		35		
7802BX	Frame (windshield) assy.—lower	1922	2		1 00		
7887CX	Frame (windshield) assy.—upper	1922	2		1 00		
7888BX	Filler (windshield upper frame)—lower	1922	4		10		
7847X	Filler (windshield upper frame)—upper	1922	4		15		
7803BX	Filler (windshield lower frame)	1922	4		15		
7825X	Nut (windshield clamp stud wing)	1922	6		15		
7842X	Nut (windshield cone lock)	1922	12		02		
1307X	Nut (windshield bracket to instrument panel bolt) lower	1922	12		05		

†Order 7845X-7846X extra for 1915-16 cars.

*Used on cars without starter.

Of the net amount at which parts marked "MH" are billed to purchasers who purchase direct from the Ford Motor Company, 20/21 represents the price of the goods and 1/21 represents excise tax.

Part No.	Name of Part	Year	Minimum Whole- sale Quan.	List Price Each	Tax Status
TOURING CAR AND ROADSTER WINDSHIELDS—1922—Continued					
7851BX	Retainer (windshield glass) upper	1922	6	\$0 20	
7852BX	Retainer (windshield glass) lower	1922	6	20	
7826X	Stud (windshield frame clamping)	1922	12	03	
7833X	Washer (windshield clamp stud nut)	1922	12	02	
7840BX	Windshield assembly	1922	2	15 50	MH.
7822CX	Windshield (upper half) assy.	1922	2	6 50	MH.
7823BX	Windshield (lower half)	1922	2	6 00	MH.
†7811X	Windshield bracket to body bolt	1922	12	02	

TOURING CAR TOPS—1915-22

*7940ARX	Touring car top complete	1915-22			MH.
6882ARX	T. C. storm curtain (R. H.)	1915-22	2	2 00	MH.
6883ARX	T. C. storm curtain (L. H.)	1915-22	2	2 00	MH.
4966BRX	T. C. side curtain (R. H.)	1915-22	2	2 50	MH.
4967BRX	T. C. side curtain (L. H.)	1915-22	2	2 50	MH.
6894ARX	T. C. center deck complete	1915-22	2	7 00	MH.
6886ARX	T. C. center deck only 91½" x 50"	1915-22	2	4 00	
8913ARX	T. C. side quarter (R. H.)	1915-22	2	1 50	
8914ARX	T. C. side quarter (L. H.)	1915-22	2	1 50	
6815ARX	T. C. side quarter pad	1915-22	2	1 00	
6940ARX	T. C. back stay and curtain assembly	1915-22	3	3 00	MH.
3897X	T. C. wood bow	1913-17	2	75	
8973ARX	T. C. front and rear extension rib	1918-22	2	40	
8974ARX	T. C. front and rear upright rib	1918-22	2	40	
4596X	T. C. bow separator—male	1913-17	6	05	
4597X	T. C. bow separator—female	1913-17	6	05	
6832X	T. C. bow separator	1918-22	6	05	
6860ARX	T. C. front extension bow socket (R. H.)	1915-17	2	1 00	
6860BRX	T. C. front extension rib socket (R. H.)	1918-22	2	1 00	
6861ARX	T. C. front extension bow socket (L. H.)	1915-17	2	1 00	
6861BRX	T. C. front extension rib socket (L. H.)	1918-22	2	1 00	
3884ARX	T. C. rear extension bow socket (R. H.)	1913-17	2	1 00	
3884BRX	T. C. rear extension rib socket (R. H.)	1918-22	2	1 00	
3885ARX	T. C. rear extension bow socket (L. H.)	1913-17	2	1 00	
3885BRX	T. C. rear extension rib socket (L. H.)	1918-22	2	1 00	
6862ARX	T. C. front upright bow socket (R. H.)	1915-17	2	1 00	
6862BRX	T. C. front upright rib socket (R. H.)	1918-22	2	1 00	
6863ARX	T. C. front upright bow socket (L. H.)	1915-17	2	1 00	
6863BRX	T. C. front upright rib socket (L. H.)	1918-22	2	1 00	
3882ARX	T. C. rear upright bow socket (R. H.)	1913-17	2	1 00	
3882BRX	T. C. rear upright rib socket (R. H.)	1918-22	2	1 00	
3883ARX	T. C. rear upright bow socket (L. H.)	1913-17	2	1 00	
3883BRX	T. C. rear upright rib socket (L. H.)	1918-22	2	1 00	
7831X	Curtain to windshield hook	1915-22	10	02	
7832X	Curtain to body hook	1915-22	10	02	
6837X	Touring car key strap assembly	1913-18	6	05	
8992X	Rib socket cotter	1918-22	10	05	
3924ARX	T. C. top to windshield strap assembly	1915-22	6	25	
3629ARX	T. C. rear stay strap assembly complete	1913-21	6	40	
3629BRX	Stay strap assy.	1921-22	4	40	
6925X	T. C. curtain to windshield strap assembly	1915-19	6	10	
6926X	T. C. curtain to lamp bracket strap assy.	1915-19	4	10	
3754X	T. C. curtain glove fastener assembly	1913-22	10	05	
6829AX	T. C. duquesne clip—upper	1914-17	10	05	
6829BX	T. C. extension support—upper	1918-22	10	10	
6830AX	T. C. duquesne clip—lower	1914-17	10	05	
6830BX	T. C. extension support—lower	1918-22	10	05	
8937X	T. C. top snap fastener—single	1917-22	10	05	
8938X	T. C. top snap fastener—double	1917-22	10	05	
3314ARX	T. C. top prop rest with strap	1913-22	4	60	
3858X	T. C. top prop rest arm	1913-21	4	25	
3624X	T. C. bow socket to seat iron janned nut	1913-22	6	05	
6682X	Curtain celluloid 20" x 50"—.015 thick (old No. 3383X)	1913-22	2	20	
6682X	Curtain celluloid 10" x 18"—.015 thick (old No. 3383X)	1913-22	2	40	
4981ARX	Touring car top visor	1920-22	2	50	
8940X	Curtain fastener eyelet	1917-22	10	01	
8943X	Curtain fastener eyelet washer	1917-22	10	01	

TOURING CAR TOP—1922

3573X	Brace (top extension) R. H.	1922	2	35	
3574X	Brace (top extension) L. H.	1922	2	35	
*3588X	Top clamping bracket assembly	1922	2	30	
*6902X	Glove fastener button	1922	12	02	
††6940BX	Curtain (rear) assembly	1922	2	2 50	MH.
6940CX	Curtain (rear) assembly	1922	2	2 50	MH.
††4966CX	Curtain (rear side) assembly—R. H.	1922	2	2 00	MH.
4966DX	Curtain (rear side) assembly—R. H.	1922	2	2 00	MH.
††4967CX	Curtain (rear side) assembly—L. H.	1922	2	2 00	MH.
4967DX	Curtain (rear side) assembly—L. H.	1922	2	2 00	MH.
6882BX	Curtain (front side) assembly—R. H.	1922	2	2 00	MH.
6883BX	Curtain (front side) assembly—L. H.	1922	2	2 00	MH.
6886BX	Deck (top) only	1922	2	3 50	
††6894BX	Deck (top) assembly	1922	2	6 00	MH.
6894CX	Deck (top) assembly	1922	2	6 00	MH.
*6903X	Eyelet (side curtain rear glove fastener)	1922	12	02	

*Inquire of Branch or Dealer for price.

**Also used on 1922 Roadster Top.

†Used on cars without starter.

††Used on tops with straight side quarters.

Of the net amount at which parts marked "MH" are billed to purchasers who purchase direct from the Ford Motor Company, 20/21 represents the price of the goods and 1/21 represents excise tax.

Part No.	Name of Part	Year	Minimum Whole- sale Quan.	List Price Each	Tax Status
TOURING CAR TOP—1922—Continued					
*6904X	Fastener (rear curtain glove)	1922	12	\$0 02	
*7831BX	Hook (curtain to windshield)	1922	12	02	
6815BX	Pad (top side quarter) assembly	1922	2	1 00	
††8913BX	Quarter (side) and reinforcement assembly—R. H.	1922	2	1 25	
8913CX	Quarter (side) and reinforcement assembly—R. H.	1922	2	1 25	
††8914BX	Quarter (side) and reinforcement assembly—L. H.	1922	2	1 25	
8914CX	Quarter (side) and reinforcement assembly—L. H.	1922	2	1 25	
*3314BX	Rest (prop) and strap assembly	1922	6	45	
8975X	Rib (top) center and rear	1922	2	40	
8973BX	Rib (top) front	1922	2	40	
8974BX	Rib (top) center ext.	1922	2	40	
*3548X	Screw (front socket fastener)	1922	12	dz. 05	
6860CX	Socket (top rib) front—R. H.	1922	2	1 00	
6861CX	Socket (top rib) front—L. H.	1922	2	1 00	
3882CX	Socket (top rib) center—R. H.	1922	2	1 25	
3883CX	Socket (top rib) center—L. H.	1922	2	1 25	
††3884CX	Socket (top rib) rear—R. H.	1922	2	1 25	
3884DX	Socket (top rib) rear—R. H.	1922	2	1 25	
††3885CX	Socket (top rib) rear—L. H.	1922	2	1 25	
3885DX	Socket (top rib) rear—L. H.	1922	2	1 25	
6862CX	Socket (top rib) center ext.—R. H.	1922	2	1 00	
6863CX	Socket (top rib) center ext.—L. H.	1922	2	1 00	
6844BX	Top center strainer	1922	4	40	
6846X	Top quarter strainer	1922	4	40	
*3629CX	Strap (stay)	1922	4	40	
*3542X	Strip (rear curtain finishing)	1922	2	15	
*6901X	Stud (rear curtain glove fastener)	1922	12	02	
3551X	Center support on rear socket	1922	6	10	
3553X	Center ext. support—on rear socket	1922	6	05	
3564X	Center ext. support—on center socket	1922	6	10	
3572X	Center ext. to brace support	1922	6	05	
*7940BX	Top assembly	1922			MH.
*4981BX	Visor (top) assembly	1922	2	75	
*6905X	Washer (side curtain rear glove fastener)	1922	12	02	

TORPEDO TOP PARTS—1915-22

*7941ARX	Torpedo top complete	1915-22			MH.
4971	Torpedo top—second and third wood bows	1914-18	2	50	
6929X	Torpedo top—first bow	1915-18	2	50	
8772X	Rib—upright	1918-22	2	40	
8988X	Rib—front extension	1918-22	2	40	
8989X	Rib—rear extension	1918-22	2	40	
6870AX	Torp. bow socket—upright—(R. H.)	1915-18	2	1 25	
6870BX	Torp. rib socket—upright—(R. H.)	1918-22	2	1 00	
6871AX	Torp. bow socket—upright—(L. H.)	1915-18	2	1 25	
6871BX	Torp. rib socket—upright—(L. H.)	1918-22	2	1 00	
6872AX	Torp. bow socket—front extension—(R. H.)	1915-18	2	1 00	
6872BX	Torp. rib socket—front extension—(R. H.)	1918-22	2	1 00	
6873AX	Torp. bow socket—front extension—(L. H.)	1915-18	2	1 00	
6873BX	Torp. rib socket—front extension—(L. H.)	1918-22	2	1 00	
4907AX	Torp. bow socket—rear extension—(R. H.)	1913-18	2	1 00	
4907BX	Torp. rib socket—rear extension—(R. H.)	1918-22	2	1 00	
4908AX	Torp. bow socket—rear extension—(L. H.)	1913-18	2	1 00	
4908BX	Torp. rib socket—rear extension—(L. H.)	1918-22	2	1 00	
6937AX	Torp. side curtain—rear—(R. H.)	1915-22	2	1 50	MH.
6938AX	Torp. side curtain—rear—(L. H.)	1915-22	2	1 50	MH.
6935AX	Torp. side curtain—front—(R. H.)	1915-22	2	2 00	MH.
6936AX	Torp. side curtain—front—(L. H.)	1915-22	2	2 00	MH.
6950AX	Torp. back curtain assembly	1915-22	3	2 50	MH.
6965AX	Torp. center deck complete	1915-22	2	4 50	MH.
6964AX	Torp. top deck only	1915-22	2	2 50	
6962AX	Torp. side quarter—(R. H.)	1915-22	2	1 00	
6963AX	Torp. side quarter—(L. H.)	1915-22	2	1 00	
6806AX	Torp. side quarter pad	1914-22	2	60	
3877X	Torp. prop rest with strap	1913-22	6	60	
4955AX	Torp. top visor	1920-22	2	50	

ROADSTER TOP—1922

6935BX	Curtain (front side) assembly—R. H.	1922	2	2 00	MH.
6936BX	Curtain (front side) assembly—L. H.	1922	2	2 00	MH.
6937BX	Curtain (rear side) assembly—R. H.	1922	2	1 50	MH.
6938BX	Curtain (rear side) assembly—L. H.	1922	2	1 50	MH.
6950BX	Rear curtain assembly	1922	2	2 50	MH.
6964BX	Top deck only	1922	2	2 50	
6965BX	Top deck assembly	1922	2	4 50	MH.
6806BX	Top side quarter pad assembly	1922	2	60	
6962BX	Side quarter and reinforcement assembly—R. H.	1922	2	1 00	
6963BX	Side quarter and reinforcement assembly—L. H.	1922	2	1 00	
8988BX	Top rib—front	1922	2	40	
8989BX	Top rib—center and rear	1922	2	40	
4907CX	Top rib socket, rear—R. H.	1922	2	1 00	
4908CX	Top rib socket, rear—L. H.	1922	2	1 00	
6872CX	Top rib socket, front	1922	2	1 00	
6870CX	Top rib socket, center—R. H.	1922	2	1 00	
6871CX	Top rib socket, center—L. H.	1922	2	1 00	
*7941BX	Top assembly	1922	2		MH.

*Inquire of Branch or Dealer for price.

**Also used on 1922 Roadster top.

†For additional 1922 Roadster top parts see 1922 Touring Car top parts marked with a double asterisk (**).

††Used on tops with straight side quarters.

Price List of Parts for Model T One Ton Truck

Part No.	Name of Part	Year	Minimum Whole- sale Quan.	LIST PRICE			Tax Status	Model No.	Fac. Req. No.	No. per Car
				Lots of 100 per lot	Each					
REAR AXLE										
1000	Rear axle assembly	1918-22	2		\$150 00	MH	TT	95	1	
1001	Axle housing—right	1918-22	2		16 00	MH	TT	4	1	
1002	Axle housing—left	1918-22	2		16 00	MH	TT	5	1	
1003	Axle housing bolt	1918-22	20		03		TT	52	13	
1003B	Axle housing bolt nut	1918-22	Order 2719							
1004	Axle housing cap	1918-22	6		50	MH	TT	133	1	
1005	Axle housing cap gasket	1918-22	20	\$1 50	02		TT	134	1	
1006	Axle housing cap screw	1918-22	20		05		TT	72	4	
1007	Axle housing cap screw lock wire	1918-22	20		01		TT	140	1	
1008	Axle housing gasket—upper	1918-22	10		02		TT	138	1	
1009	Axle housing gasket—lower	1918-22	10		05		TT	139	1	
1010	Axle brake housing plate—right	1918-22	6		35	MH	TT	147	1	
1011	Axle brake housing plate—left	1918-22	6		35	MH	TT	148	1	
1012	Axle housing drain plug	1918-22	10		05		TT	136	2	
1013	Axle shaft	1918-22	2		5 00	MH	TT	48	2	
1014	Axle shaft cotter	1918-22	24		doz.		TT	165	2	
1015	Axle shaft nut	1918-22	20	8 00	10		TT	166	2	
1016	Axle shaft washer	1918-22	20	2 50	03		TT	135	2	
1017	Axle shaft dust cap	1918-22	10		03		TT	56	2	
1018	Axle shaft inner ball bearing assy.	1918-22	2		5 00		TT	125	2	
1019	Axle shaft outer roller bearing	1918-22	2		1 25		TT	253	2	
1020	Axle shaft outer roller bearing sleeve	1918-22	2		15		TT	170	2	
1021	Axle shaft bearing felt	1918-22	20	12 00	15		TT	143	4	
1022	Axle shaft bearing retainer	1918-22	10		08		TT	20	2	
1023	Axle shaft bearing retainer washer	1918-22	20	2 00	10		TT	23	2	
1024	Axle shaft felt retainer assembly	1918-22	10		10		TT	144	2	
1025	Axle shaft felt retainer cup	1918-22	10		03		TT	145	2	
1026	Axle shaft felt retainer plate	1918-22	10		03		TT	146	2	
1027	Diff. gear	1918-22	2		1 30	MH	TT	13	2	
1028	Diff. gear case R. or L. half	1918-22	2		2 00	MH	TT	11	2	
1029	Diff. gear case bolt	1918-22	Order 1003							
1031	Diff. gear lock ring	1918-22	10		02		TT	118	2	
1032	Diff. pinion	1918-22	2		60	MH	TT	14	2	
1033	Diff. pinion shaft	1918-22	2		20		TT	15	1	
1034	Drive shaft	1918-22	2		7 00	MH	TT	87	1	
1036	D. S. tube assembly	1918-22	2		12 00	MH	TT	153	1	
1037	D. S. tube flange gasket	1918-22	20	1 25	02		TT	194	1	
1038	D. S. tube flange screw	1918-22	Order 1006							
1039	D. S. felt	1918-22	10		10		TT	109	1	
1040	D. S. felt container	1918-22	10		03		TT	110	1	
1041	D. S. to worm coupling	1918-19	2		1 00		TT	85A	1	
1041B	D. S. to worm coupling	1920-22	2		80		TT	85B	1	
1042	D. S. to worm coupling pin	1918-22	10		01		TT	86	2	
1043	Worm—7½ to 1	1918-22	2		7 50	MH	TT	16A	1	
1043B	Worm—5½ to 1	1918-22	2		7 50	MH	TT	16B	1	
1044	Worm gear—7½ to 1	1918-22	2		10 00	MH	TT	12A	1	
1044B	Worm gear—5½ to 1	1918-22	2		10 00	MH	TT	12B	1	
1045	Worm cotter	1918-22	Order 1014							
1046	Worm roller bearing	1918-22	2		1 09		TT	108	2	
1047	Worm roller bearing retainer	1918-22	10		02		TT	106	1	
1048	Worm roller bearing sleeve	1918-22	2		1 50		TT	107	2	
1049	Worm roller bearing housing screw	1918-22	10		03		TT	101	2	
1050	Worm thrust bearing collar	1918-22	2		90		TT	114	2	
1051	Worm thrust ball and separator assy.	1918-22	2		65		TT	123	1	
1052	Worm thrust bearing plate	1918-22	2		15		TT	22	1	
1053	Worm thrust bearing retainer	1918-22	2		15		TT	111	1	
1054	Worm thrust bearing retainer nut	1918-22	Order 1015							
1055	Worm thrust bearing retainer pin	1918-22	10		01		TT	112	1	
1056	Brake shoe	1918-22	4		2 00	MH	TT	2814	2	
1057	Brake shoe lining, each	1918-22	10		30	MH	TT	58	4	
1058	Brake shoe lining rivet	1918-22	100		doz.		TT	68	40	
1059	Brake shoe spring	1918-22	10		05		TT	67	2	
1060	Brake shoe bolt	1918-22	10		10		TT	59	2	
1060B	Brake shoe bolt nut	1918-22	Order 2828							
1061	Brake expander	1918-22	4		40		TT	61	2	
1062	Brake expander lever	1918-22	4		15		TT	62	2	
1064	Brake expander adjustment collar	1918-22	4		20		TT	175	2	
1065	Brake expander bushing	1918-22	4		10		TT	173	2	
1066	Brake expander pin	1918-22	4		01		TT	7	2	
1067	Brake expander link	1918-22	10		08		TT	176	4	
1068	Brake expander link pin	1918-22	20		03		TT	177	8	
1069	Brake rod	1918-22	4		30	MH	TT	119	2	
*1070	Brake rod support—right	1918-22	6	5 00	10		TT	120	1	
*1071	Brake rod support—left	1918-22	6	5 00	10		TT	121	1	
1072	Brake rod support bolt	1918-22	10		02		TT	121	1	
1072B	Brake rod support bolt nut	1918-22	Order 3088E							
1073	Rear radius rod	1918-22	2		3 50		TT	152	2	
1074	Rear radius rod bolt—front	1918-22	10		10		TT	84	1	
1075	Rear radius rod bolt—rear	1918-22	10		10		TT	83	4	
1075B	Rear radius rod bolt nut	1918-22	Order 2828							
1076	Universal joint bushing	1918-22	2		40		TT	69	1	

Ford Motor Company

Parts Price List

Page Twenty-seven

Part No.	Name of Part	Year	Minimum Whole- sale Quan.	LIST PRICE		Tax Status	Fac. Req. Model No.	No. Per Car
				Lots of 100 per lot	Each			
SPRING								
1077	Rear spring—right or left, each	1918-22	2		\$4 50	MH	TT 333	2
1078	Spring leaf No. 1	1918-22	2		1 00		TT 334	2
1079	Spring leaf No. 2	1918-22	2		60		TT 362	2
1080	Spring leaf No. 3	1918-22	2		55		TT 363	2
1081	Spring leaf No. 4	1918-22	2		45		TT 364	2
1082	Spring leaf No. 5	1918-22	2		40		TT 365	2
1083	Spring leaf No. 6	1918-22	2		35		TT 366	2
1084	Spring leaf No. 7	1918-22	2		30		TT 367	2
1085	Spring leaf No. 8	1918-22	2		25		TT 368	2
1086	Spring leaf No. 9	1918-22	2		20		TT 331	2
1087	Spring bushing	1918-22	2		20		TT 332	2
1088	Spring clip	1918-22	2		45		TT 326	2
1089	Spring clip nut	1918-22	10		\$9 00		TT 327	4
1091	Spring clip plate	1918-22	4		20		TT 329	2
1092	Spring tie bolt	1918-22	4		20		TT 330	2
1093	Spring tie bolt nut	1918-22	Order 1089					
1094	Spring tie bolt cotter	1918-22	24		*doz.		TT 328	2
1095	Spring clamp	1918-22	4		10		TT 375	2
1096	Spring clamp bolt	1918-22	4		04		TT 376	2
1096B	Spring clamp bolt nut	1918-22	Order 3514					
1097	Spring perch	1918-22	2		80	MH	TT 2804	2
1098	Spring perch nut	1918-22	Order 1015					
1099	Spring perch cotter	1918-22	Order 1014					
1100	Spring perch bushing	1918-22	4		25		TT 172	2
1101	Spring perch bushing spacer	1918-22	10		05		TT 169	4
1102	Spring hanger assembly	1918-22	6		30		TT 91	4
WHEELS								
1105B	Rear wheel—dem. Kelsey	1919-22	2		19 50		TT 7698	2
1105C	Rear wheel—dem. Hayes	1919-22	2		19 50		TT 7698B	2
1105D	Rear wheel—dem.—less rim and hub—Kelsey	1919-22	2		9 00		TT 2817AR	2
1105E	Rear wheel—dem.—less rim and hub—Hayes	1919-22	2		9 00		TT 2817BR	2
1106B	Dem. rim only—Kelsey	1919-22	2		4 00		TT 8774A	2
1106C	Dem. rim only—Hayes	1919-22	2		4 00		TT 8774B	2
1106D	Dem. rim only—Kelsey	1922	2		4 00		TT 8774C	2
1106E	Dem. rim retainer ring—Kelsey	1922	2		45		TT 178	2
1107B	Clamp and nut assembly—Kelsey	1919-22	20		15		TT 8807	12
1108B	Clamp bolt	1919-22	20		10		TT 8832	12
1109	Rear wheel complete, less tire	1918-20	2		18 00		TT 99	2
1110	Rear wheel complete, with solid tire	1918-20	2			MH	TT 7645	2
1111	Rear hub	1918-22	2		2 75		TT 40	2
1112	Rear hub flange	1918-22	2		40		TT 149	2
1113	Rear hub brake drum	1918-22	2		1 25		TT 3	2
1114	Rear hub bolt	1918-22	20		3 50		TT 28	12
1114B	Rear hub bolt nut	1918-22	20		02		TT 29	12
1116	Rear hub cap	1918-22	6		30		TT 150	2
1117	Rear hub key	1918-22	10		03		TT 26	2
1118	Rear hub felt	1918-22	10		4 00		TT 162	2
FRAME								
1119	Frame assembly	1918-22	2		30 00	MH	TT 300	1
1120	Side member—right	1918-22	2		10 00		TT 301	1
1121	Side member—left	1918-22	2		10 00		TT 302	1
1122	Front cross member	1918-22	2		1 00		TT 303	1
1123	Rear cross member	1918-22	2		4 00		TT 304	1
1124	Front corner bracket—right	1918-22	2		15		TT 305	1
1125	Front corner bracket—left	1918-22	2		15		TT 306	1
1125B	Front end spacer—right	1918-22	2		15		TT 319	1
1125C	Front end spacer—left	1918-22	2		15		TT 318	1
1126	Rear cross member gusset plate	1918-22	2		25		TT 307	2
1127	Rear cross member reinforcement	1918-22	2		35		TT 325	2
TRANSMISSION CONTROL								
1133	Speed lever	1918-22	2		10		TT 862	1
1134	Controller shaft with speed lever	1918-22	2		75	MH	TT 1557	1

*\$20.25 gross, \$0.75 per thousand.

Of the net amount at which parts marked "MH" are billed to purchasers who purchase direct from the Ford Motor Company, 20/21 represents the price of the goods and 1/21 represents excise tax.

*20-lot price \$1.40.

Of the net amount at which parts marked "MH" are billed to purchasers who purchase direct from the Ford Motor Company, 20/21 represents the price of the goods and 1/21 represents excise tax.

28.
32.
3

24.95-

91.95

366

651.95

39.95

12.00

13.30

16.60

7.95

2.00

1.20

1.20

16.20

110.30

195.

59

60.50

445.

00