


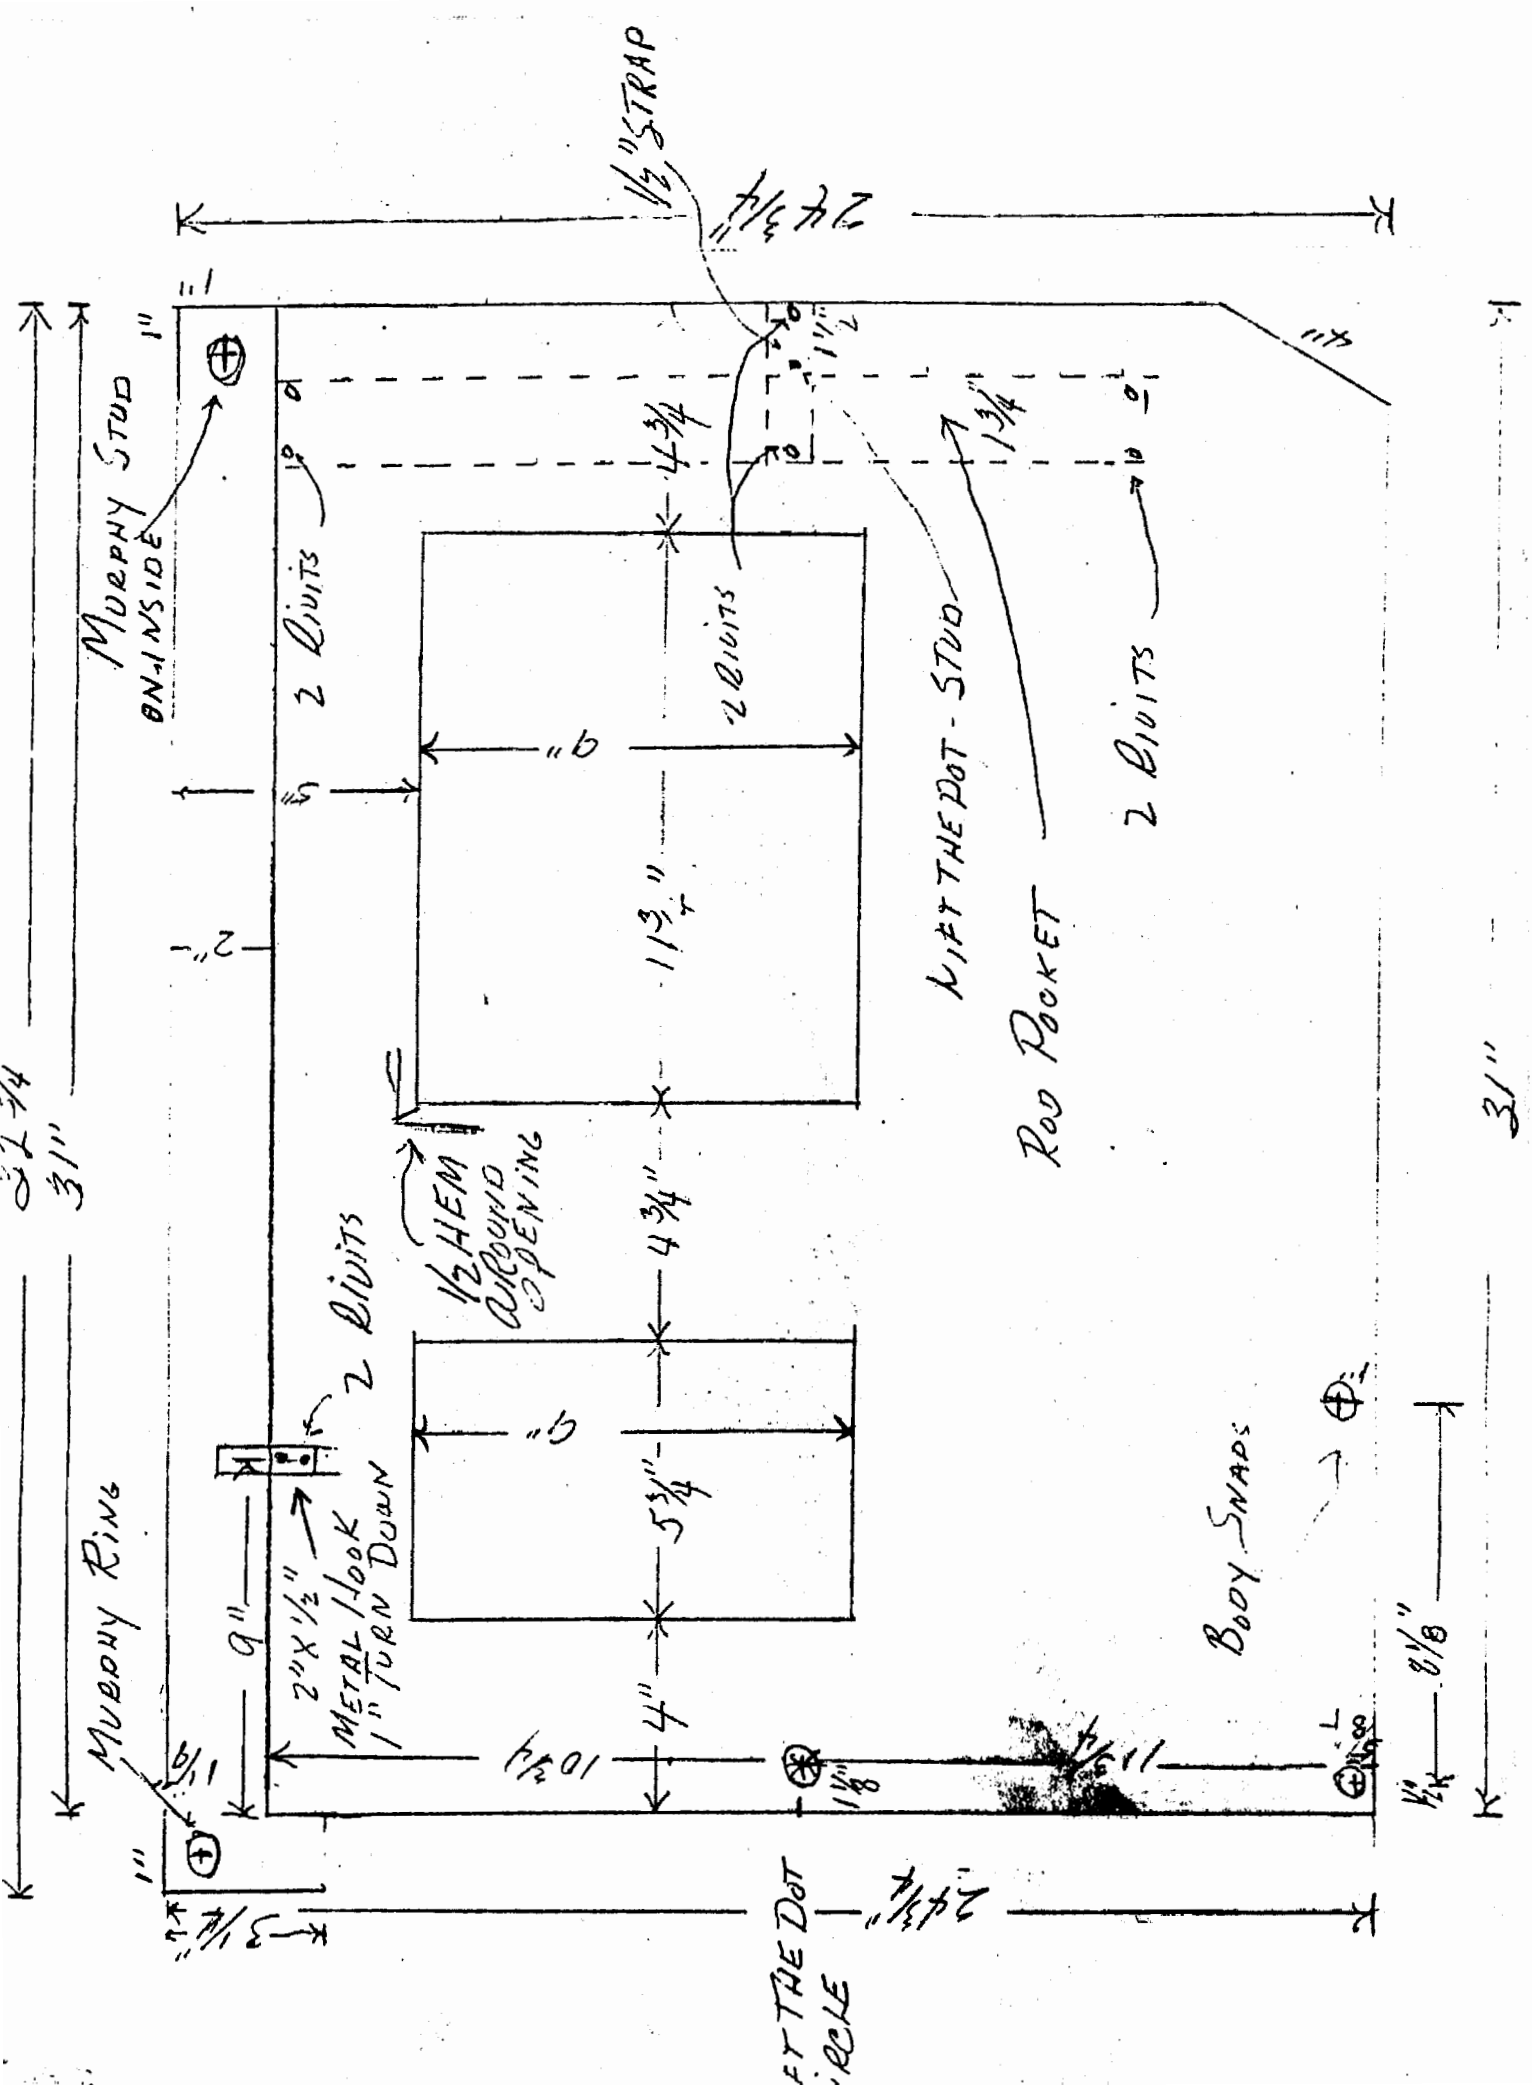



PASSENGER MIRROR IMAGE
No FLAP FOR SIGNALING


3 MURPHY FASTENERS RINGS
IN FLAP

FLAP & GO OUTSIDE
WINDSHIELD STANCHION
CUTOUTS FOR WING NETS

4- LIFT THE DOT
STRAPS TO FASTEN TO
WINDSHIELD STATIONS

NOTE
SCALE IN ERROR
MEASUREMENT CORRECT
TO MUCH SPACE UNDER
DRAWINGS

LOCKED BRASS RING w/ 3/8" hole.

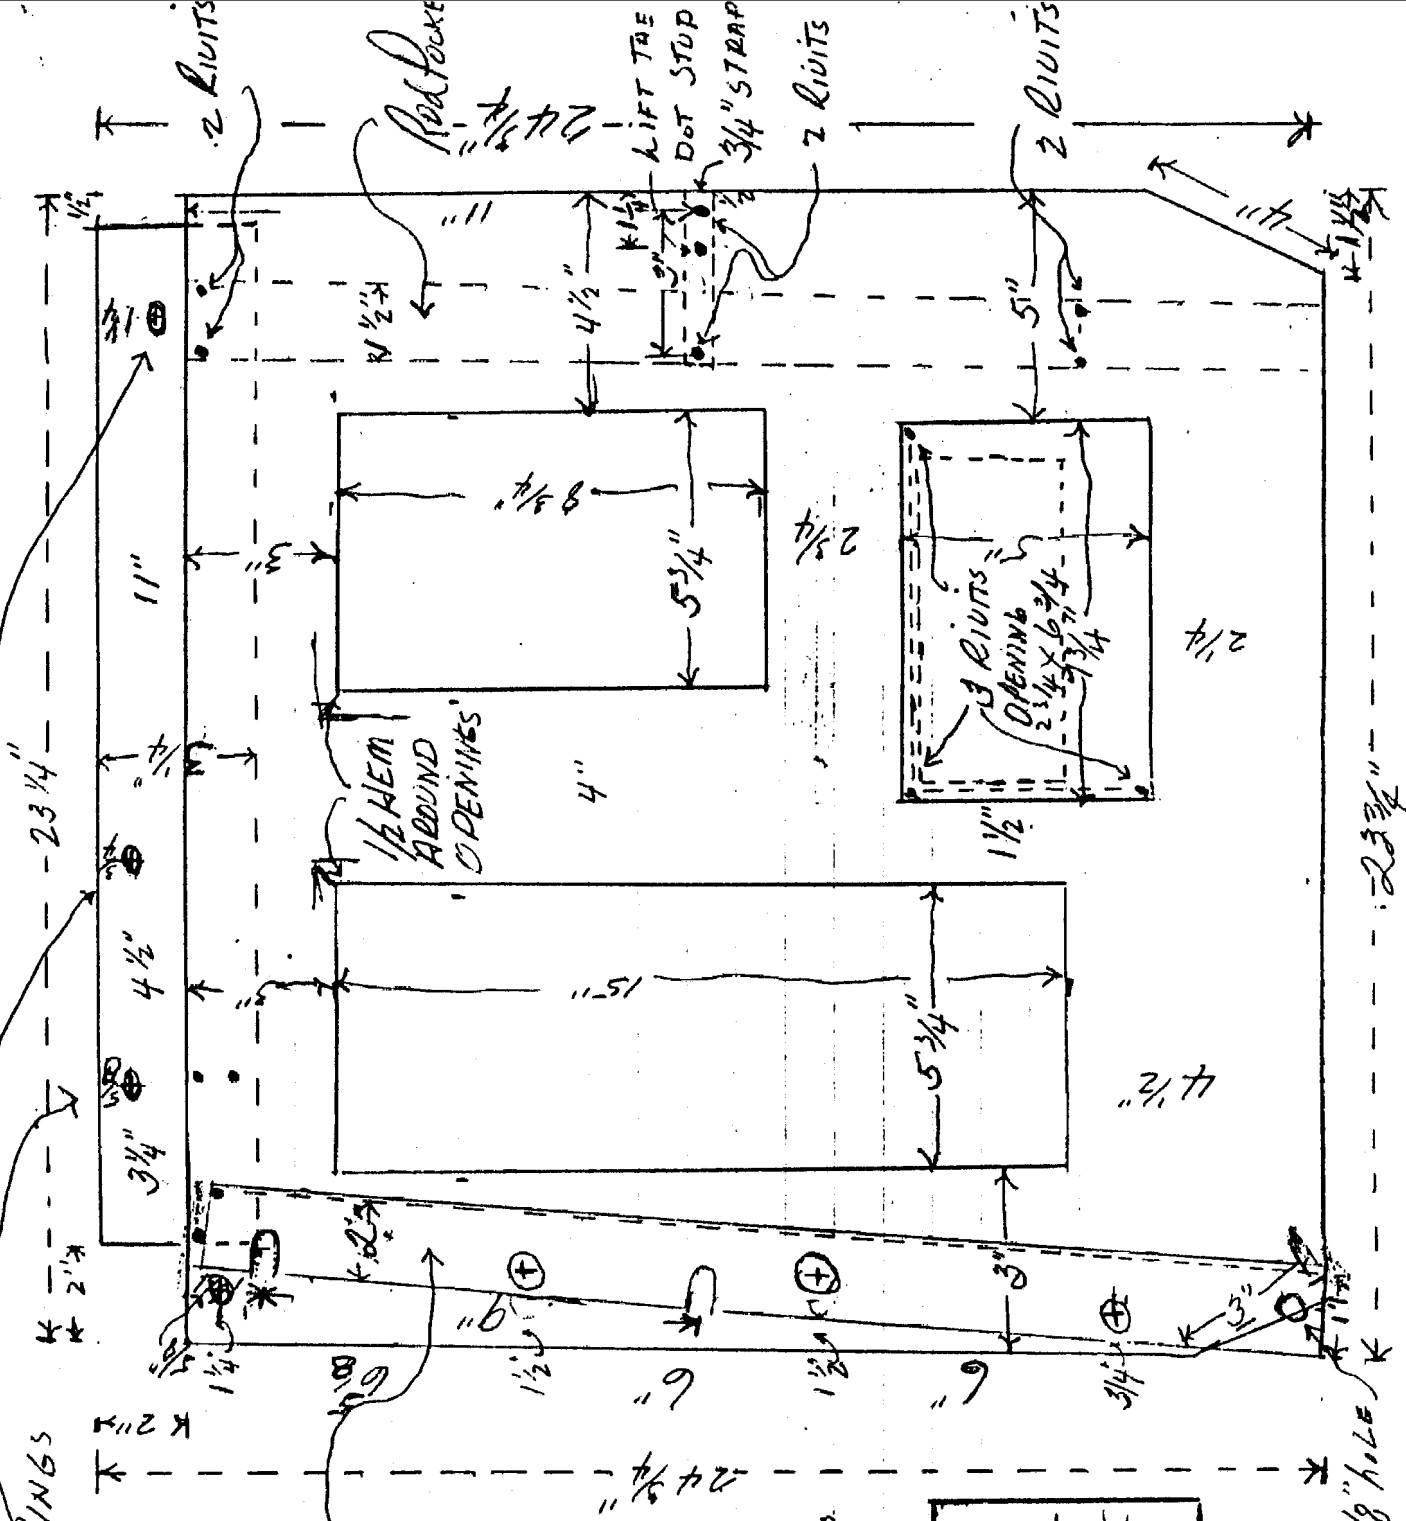

FACE MATERIAL
TURNED UNDER 2 1/2"

METAL HOEK INSIDE
2 1/2 LONG 1" TURNED
DOWN

2 1/2" H2
LIFT THE DOT FASTENER/
CIRCLE

1/2" BOUND
HEMED SLIT

Note

SCALE - IN ERROR
MEASUREMENTS ARE
CORRECT

1 MADE 3" MESSAGE
AT BOTTOM SQUARE WITH
FRONT - CHANGED DRAWING